


- INSTRUCTIONS:**
- 1.- PLACE THE CENTRAL BOX Laterally on a clean and flat surface to fix the legs with socket button bolt as shown in fig. 1 and fig. 2.
 - 3.- With someone else's help, place the base upright on the floor and put the top in its place, as shown in fig. 3.
 - 4.- Finally fix the top with the socket buttons bolts and washers as shown in fig. 4

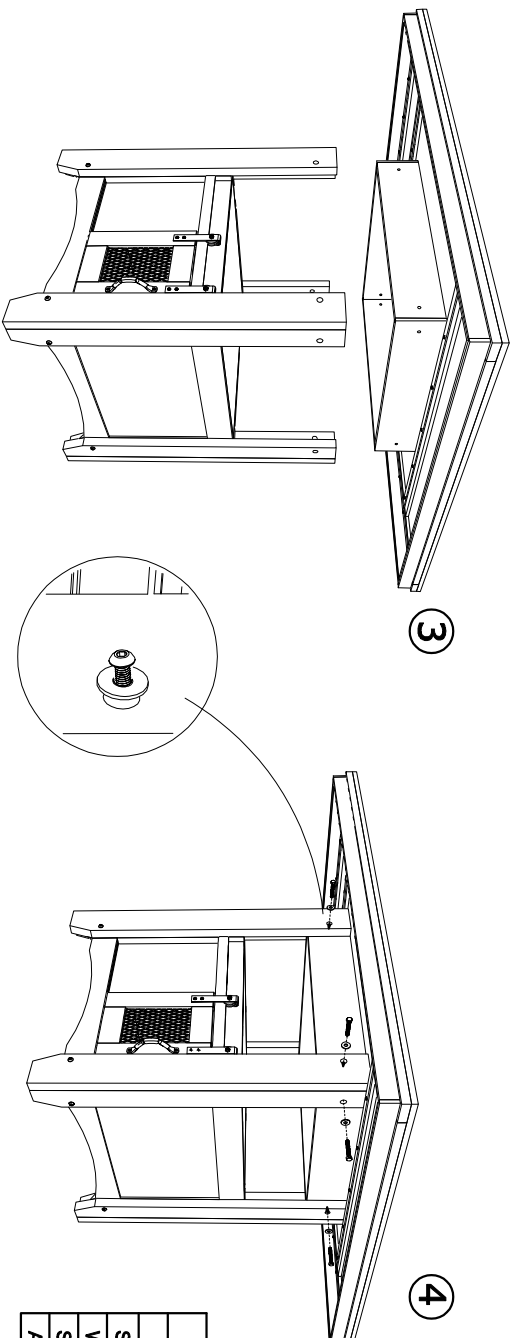

HARDWARE	
DESCRIPTION	# PCS
SOCKET BUTTON HEAD BOLT 5/16 X 2-1/2"	8
WASHER 5/16"	8
SOCKET BUTTON HEAD BOLT 5/16 X 2"	8
ALLEN KEY 3/16"	1

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



ASSEMBLY INSTRUCTIONS

I-CNT-C005