
ASSEMBLY INSTRUCTIONS

STEP 1: PREPARATION AND ACCESS


FULLY EXTEND THE DRAWERS TO ACCESS THE INTERIOR OF THE FRONT PANEL. REMOVE THE SCREWS USING THE SUPPLIED 3/16" ALLEN, WRENCH TO DETACH THE EXISTING HANDLES AND REPLACE THEM WITH THE METAL HANDLES, AS SHOWN IN DETAIL (A1)."

¿HOW TO CHANGE TO EPOXY RESIN HANDLES ON YOUR FURNITURE?

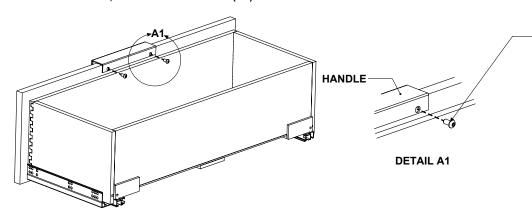

STEP 2: REMOVE THE EXISTING HANDLE

FOLLOWING REMOVAL, TWO CENTRAL PILOT HOLES WILL BE VISIBLE, AS SHOWN IN DETAIL (B1). THESE ALLOW FOR A DRY FIT OF THE COMPONENT, ENABLING A VISUAL CHECK OF THE ALIGNMENT WITHOUT FULLY

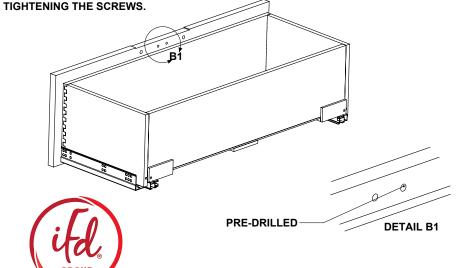


ALLOY BUTTON SOCKET CAP SCREW 1/4" X 1/2"

STEP 3: ALIGNMENT AND VERIFICATION (DRY FIT)

AFTER VERIFYING THE FIT, PROCEED WITH THE FINAL INSTALLATION.

SECURE THE ALLOY SOCKET CAP SCREWS 1/4" X 1/2"

BY APPLYING THE REQUIRED TORQUE WITH THE 3/16" KEY."

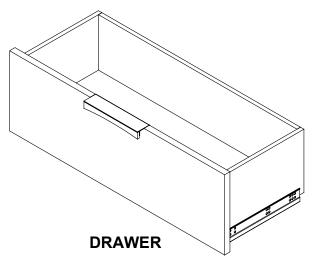

NOTE: THE EPOXY RESIN REPLACEMENT PULLS ARE LOCATED INSIDE THE PACKAGING.

DESCRIPTION	#
HEX KEY 5/32"	1

I-MIX-E018

5 4 3 2