




# ASSEMBLY INSTRUCTIONS

I-BRD-C001

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

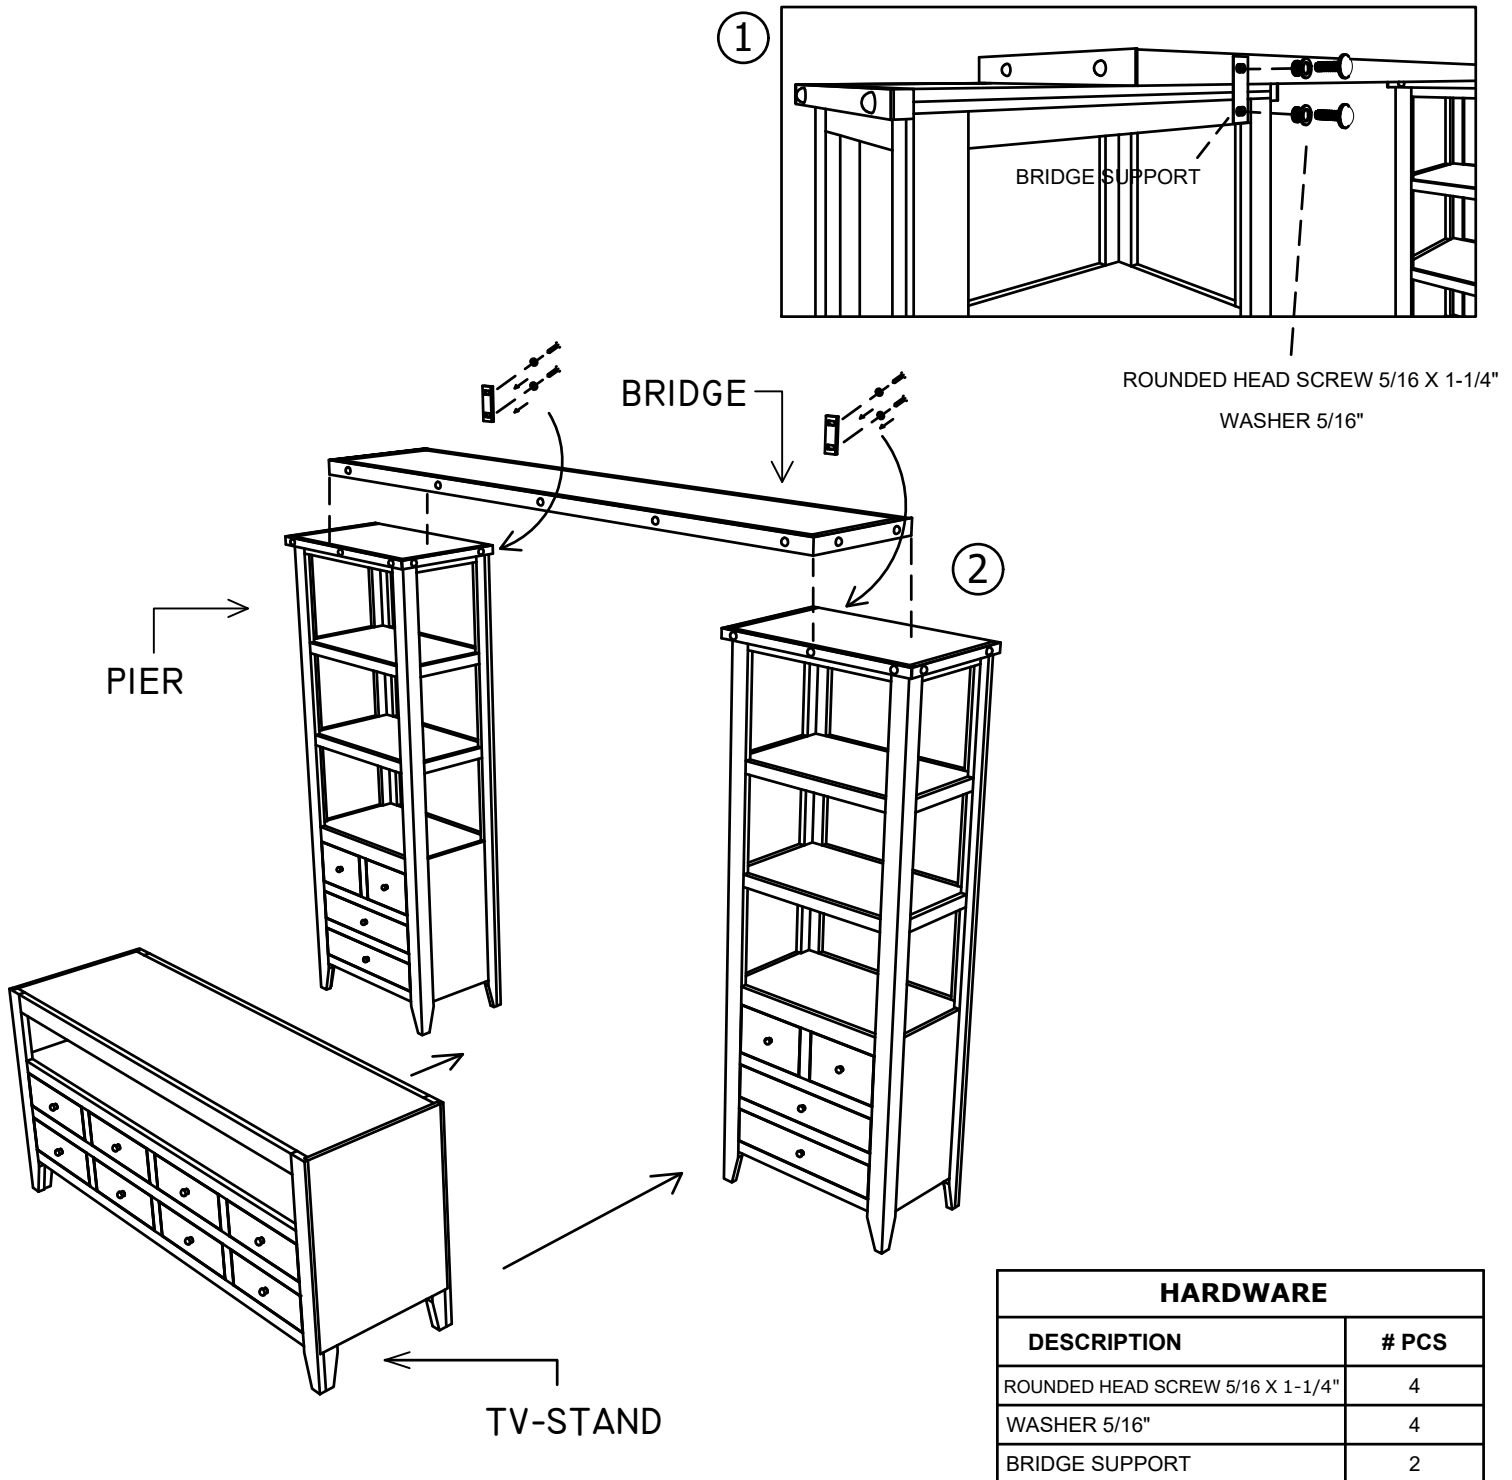

## INSTRUCTIONS:

- 1- ALIGN THE HOLES ON THE BACK OF THE BRIDGE AND THE PIER WITH THE BRACKET.
- 2- SCREW THE BOLTS IN AS SHOWN IN THE DIAGRAM.