

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

INSTRUCTIONS (A)

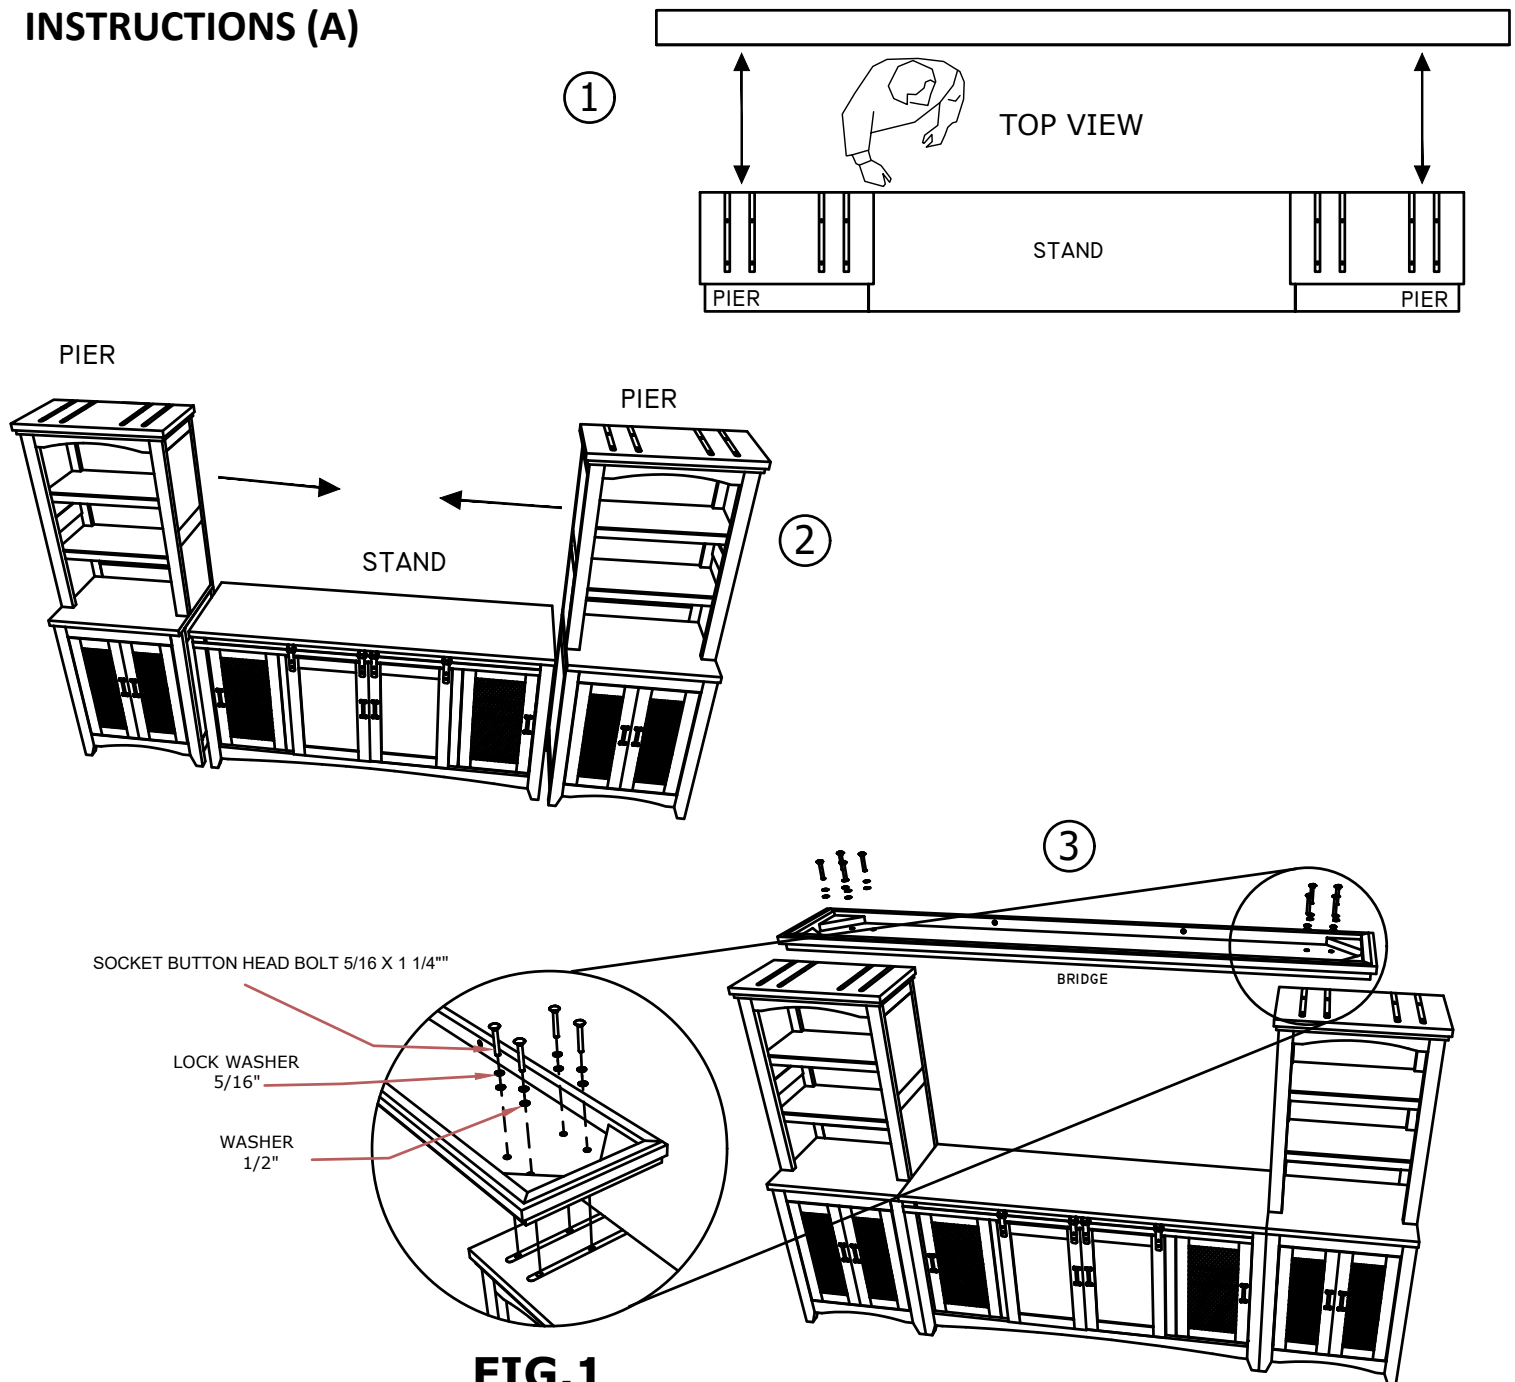




FIG. 1

INSTRUCTIONS:

- 1.- TO START ASSEMBLING THE WALL UNIT YOU MUST PLACE PIERS AND STAND FRONT THE WALL WHERE YOU WANT PLACE IT, TAKE CARE OF LEAVE A LITTLE SPACE BETWEEN THE WALL TO WORK BEHIND THEM.
- 2.- TO DEFINE THE RIGHT DISTANCE OF BOTH PIERS, INTRODUCE THE STAND BETWEEN THEM. ALIGN THE FRONT AND BACKREST.
- 3.- WITH LITTLE HELP PLACE THE BRIDGE ON THE PIERS ALIGNING THE HOLES WITH THE TOP BRIDGE AND PIERS TO SCREW THEM AS SHOW IN FIG. 1

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

INSTRUCTIONS (B)

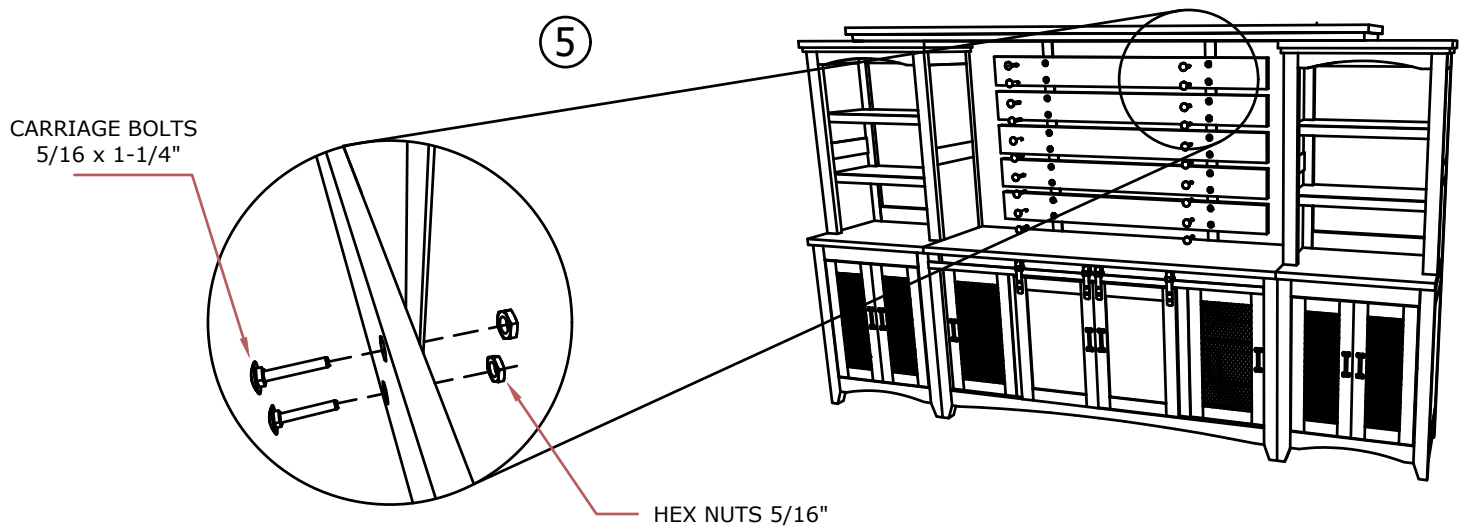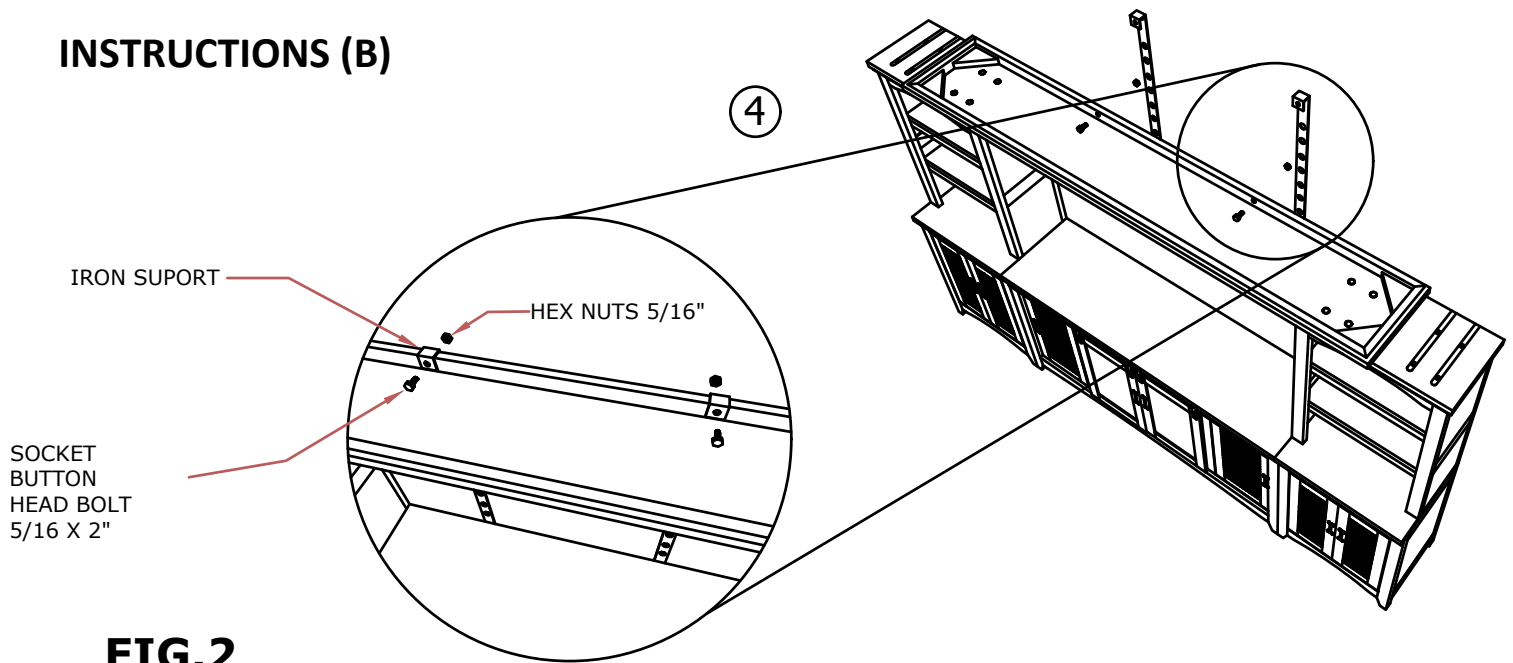

INSTRUCTIONS:

4.- HOOK UP THE IRON SUPORT ON THE BRIDGE TOP ALIGNING THE HOLES IN THE TOP AND SCREW AS SHOW IN FIG.2

5.- PIN UP THE BACKREST SLATS ASK SOME HELP OF SOMEONE TO ALIGN THE HOLES OF THE SLATS WITH THE IRON SUPORT AND SCREW AS SHOW IN FIG. 3.

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

INSTRUCTIONS (C)



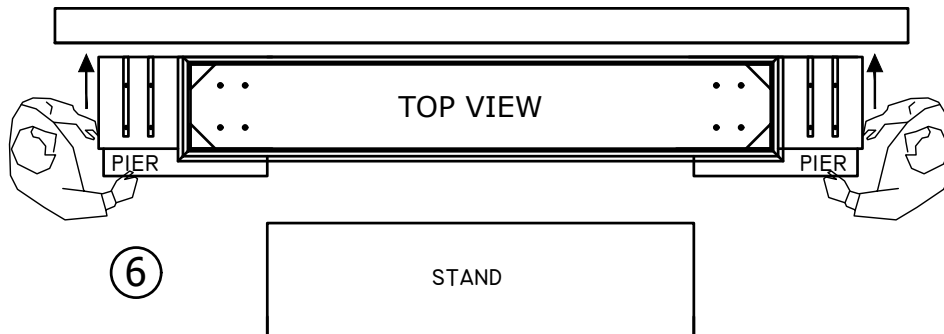


FIG.4

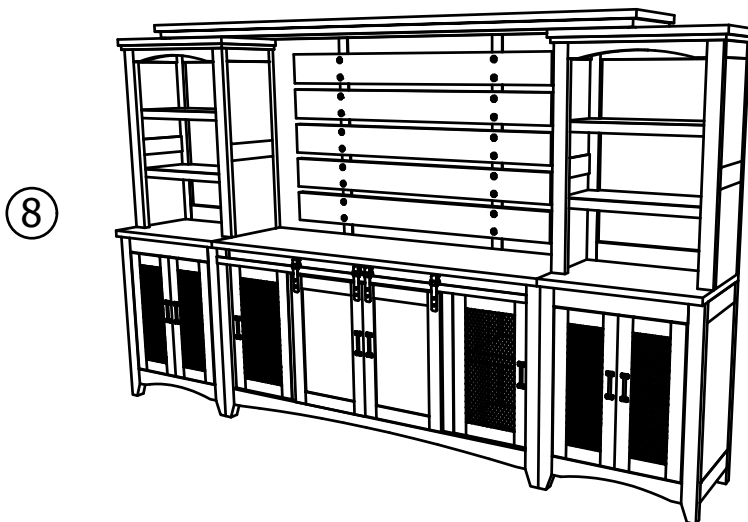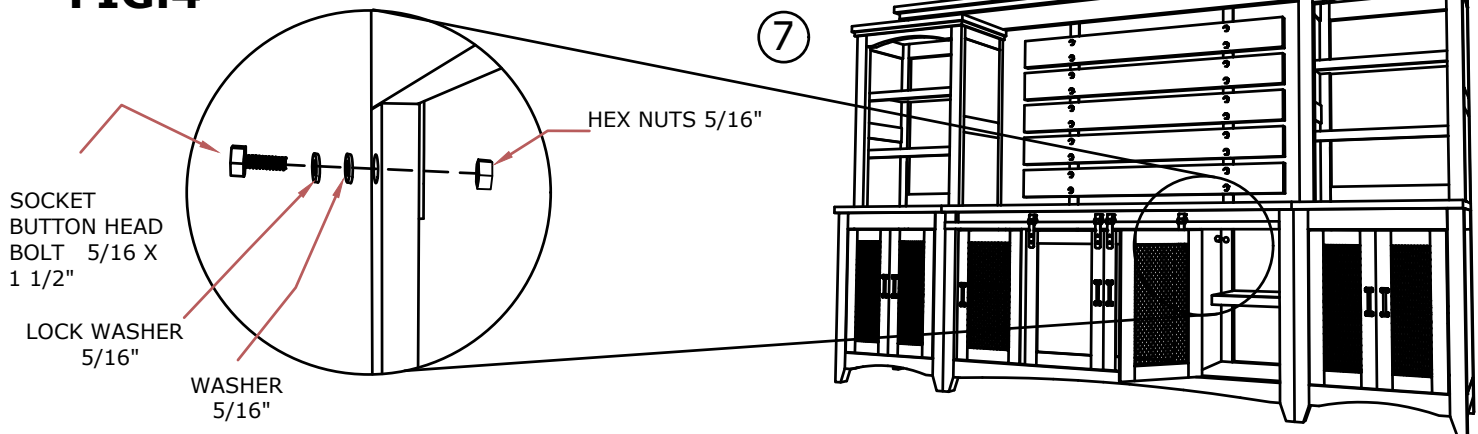

HARDWARE

DESCRIPTION	# PCS
CARRIAGE BOLT 5/16 X 1-1/4"	20
WASHER 5/16"	2
SOCKET BUTTON HEAD BOLT 5/16 X 2"	2
HEX NUT 5/16"	24
SOCKET BUTTON HEAD BOLT 5/16 X 1 1/2"	2
SOCKET BUTTON HEAD BOLT 5/16 X 1 1/4"	8
WASHER 1/2"	8
ALLEN KEY 3/16"	1
LOCK WASHER 5/16"	10

INSTRUCTIONS:

6.- WITH HELP OF SOMEONE ELSE MOVE TO THE WALL THE PIERS AND BRIDGE PREVIOUSLY ASSAMBLEMED

7.-TO FINISH THE WALL UNIT PLACE AGAIN THE STAND BETWEEN THE PIERS.

8.- ALIGN THE HOLES INSIDE THE LATERAL DOORS OF THE STAND WITH THE IRON SUPORT ONES AND SCREW AS SHOW IN FIG.4