
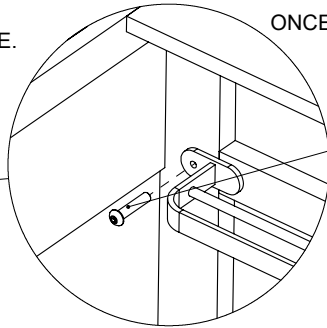


ASSEMBLY INSTRUCTIONS

STEP 1: TOWEL RACK REMOVAL


LOCATE THE TOWEL RACK ON INSIDE OF THE FURNITURE. REMOVE THE SCREWS TO DETACH THE RACK, AS SHOWN IN DETAIL A.

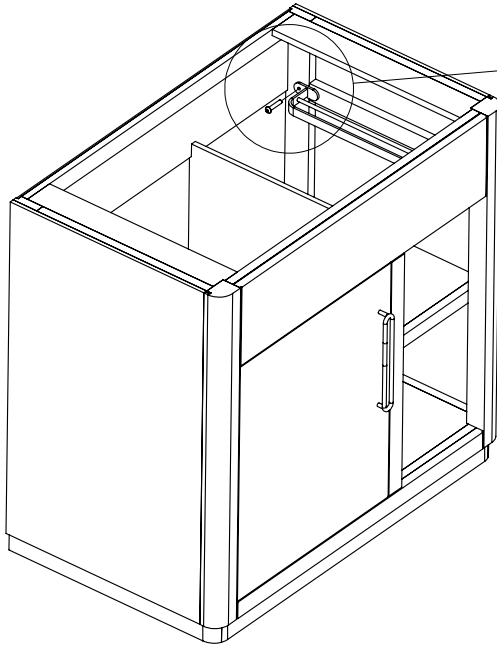

DETAIL (A)

STEP 2: TOWEL RACK INSTALLATION

ONCE REMOVED, INSTALL THE TOWEL RACK ON EITHER THE LEFT OR RIGHT EXTERIOR SIDE, DEPENDING ON YOUR PREFERENCE.

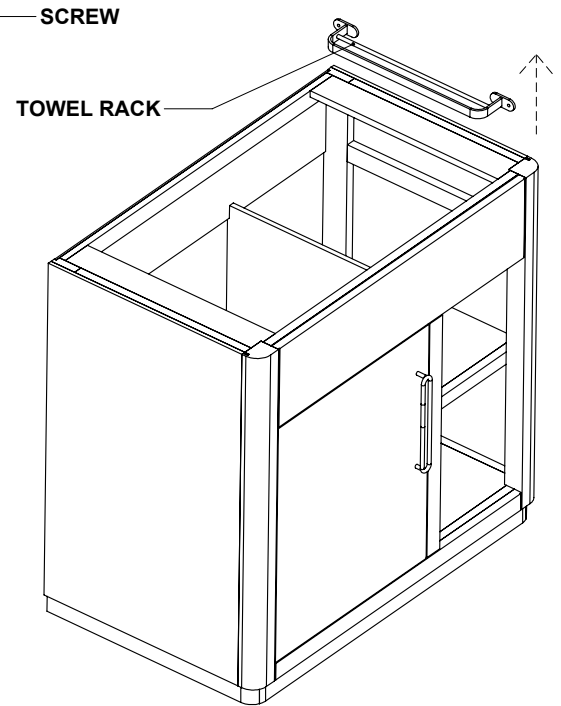


SCREW

TOWEL RACK

STEP 3: MOUNTING POSITION

POSITION THE TOWEL RACK 7" FROM THE TOP EDGE, AS SHOWN IN DETAIL B. CHECK THE INTERIOR TO ENSURE THE SCREWS DO NOT PROTRUDE.

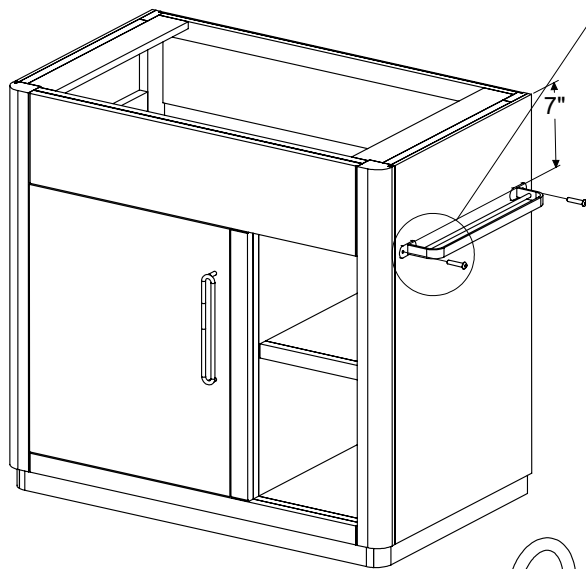


SCREW


DETAIL (B)

STEP 4: SINK INSTALLATION

THE SINK IS NOT INCLUDED; PLEASE REFER TO DETAIL (C) FOR DIMENSIONS. FOR FINAL INSTALLATION, APPLY YOUR PREFERRED ADHESIVE ALONG THE TOP EDGE OF THE CABINET BEFORE PLACING THE VANITY TOP, AS SHOWN IN DETAIL (D).

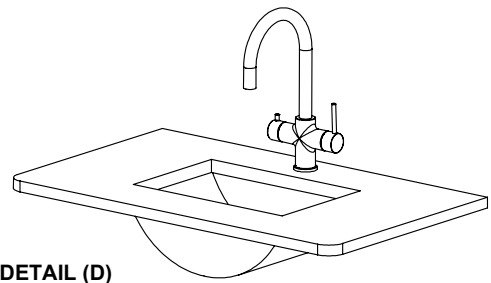

DETAIL (D)

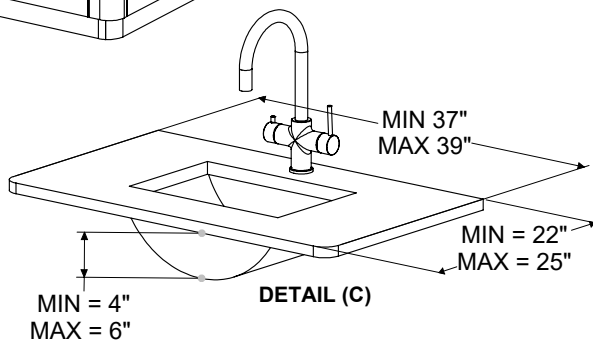

DETAIL (C)

