
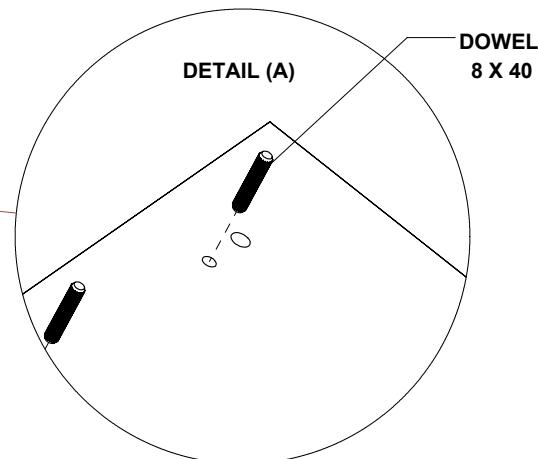


# ASSEMBLY INSTRUCTIONS

REMEMBER: DO NOT FULLY TIGHTEN ALL SCREWS UNTIL EVERYTHING IS ASSEMBLED.

## STEP 1: SIDE LEG PREPARATION

PLACE THE SIDE LEGS ON A CLEAN, FLAT SURFACE. INSERT THE 8 X 40 MM WOODEN DOWELS INTO THE CENTER HOLES OF BOTH LEGS, AS SHOWN IN DETAIL A."




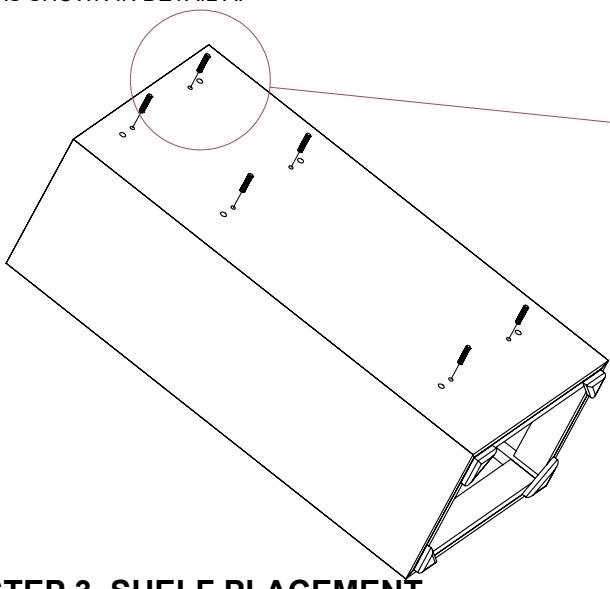


## STEP 2: ATTACHING THE TOP

WITH THE ASSISTANCE OF A HELPER, LIFT THE CENTRAL ASSEMBLY (TOP) AND ALIGN IT WITH THE HELP OF THE WOODEN DOWELS. SECURE IT USING THE ALLOY BUTTON SOCKET CAP SCREW 5/16" X 1/2" WITH THEIR RESPECTIVE FLAT AND LOCK WASHERS, AS SHOWN IN DETAIL B.

## STEP 3. SHELF PLACEMENT

WITH THE ASSISTANCE OF A HELPER, LIFT THE CENTRAL ASSEMBLY (SHELF) AND ALIGN IT WITH THE HELP OF THE WOODEN DOWELS. SECURE IT USING THE ALLOY BUTTON SOCKET CAP SCREW 5/16" X 1/2" WITH THEIR RESPECTIVE FLAT AND LOCK WASHERS, AS SHOWN IN DETAIL C.

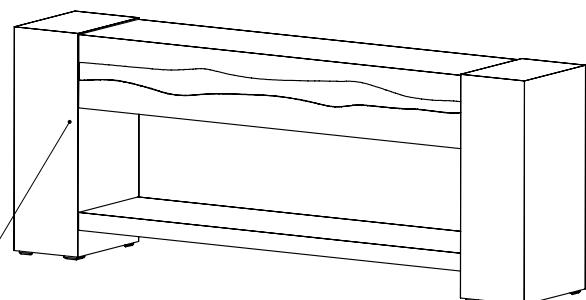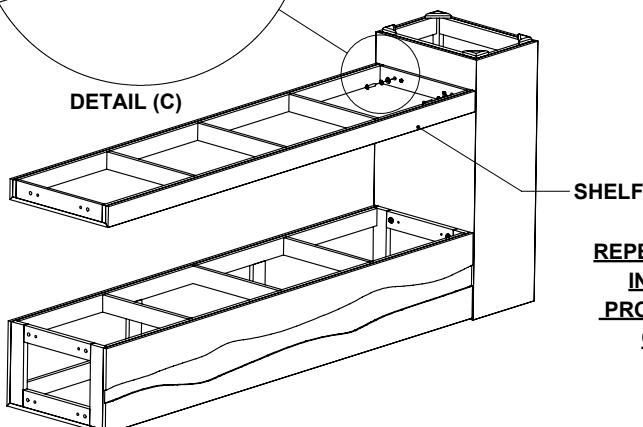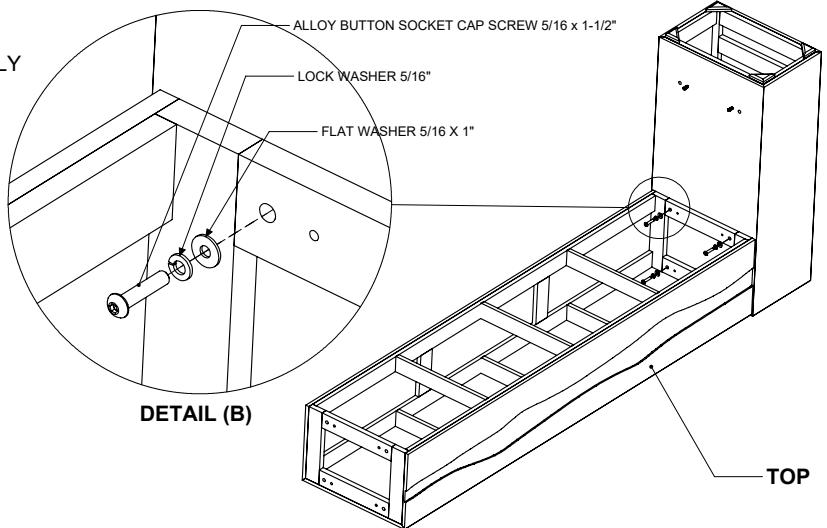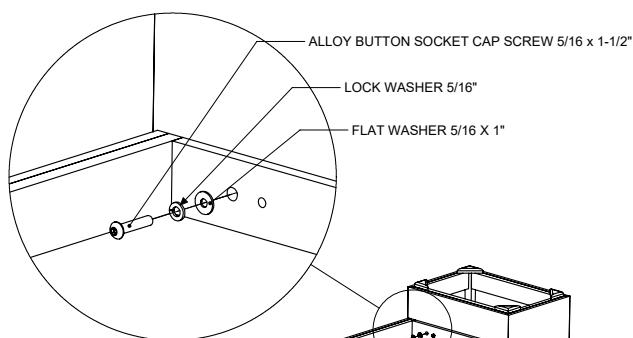

## STEP 4: FINAL ASSEMBLY

ONCE ALL HARDWARE IS INSTALLED, FULLY TIGHTEN ALL BOLTS. MOVE THE FURNITURE TO YOUR DESIRED LOCATION.



ITEM	#
DOWEL 8 X 40	12
ALLOY BUTTON SOCKET CAP SCREW 5/16 x 1-1/2"	12
LOCK WASHER 5/16"	12
FLAT WASHER 5/16 X 1"	12
HEX KEY 5/32"	1