
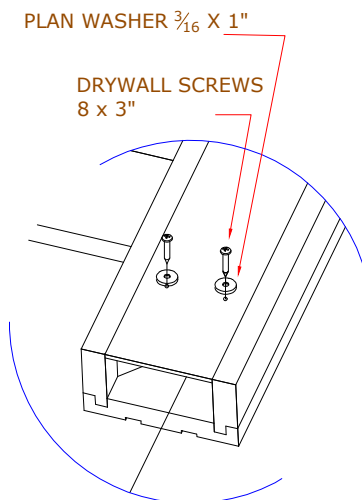


1

1.- FIX BOTH LEGS AS SHOWN IN THE IMAGE, INSERT THE SCREWS FROM THE BACK IN THE HOLES.

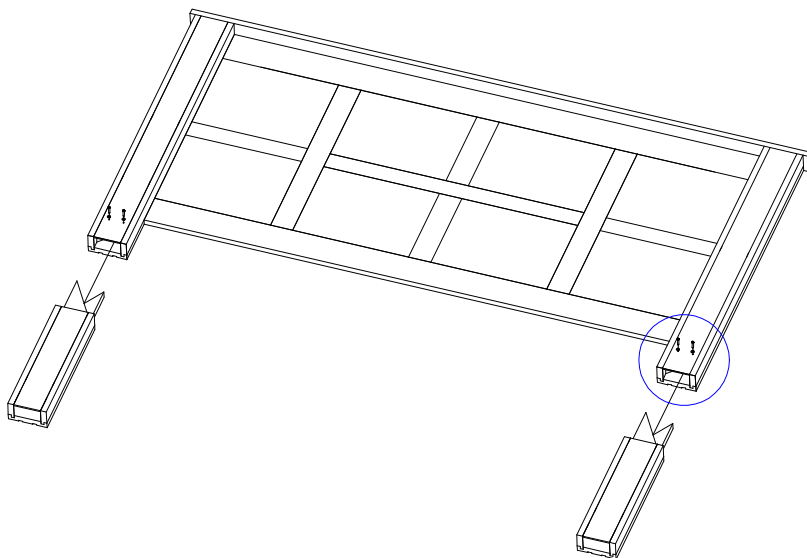

DESCRIPTION	#PZ
PAN HEAD SCREW 8 x 3"	4
PLAN WASHER 3/16 X 1"	4

ALL IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY.
SHOULD NOT BE TAKEN AS REFERENCE POINT.



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-HBD-E005

BY: IFD

CABECERA: 2401		
ITEM	DESCRIPTION	#PZ
1PIJ022	PIJA PAVONADA 8 x 3"	4
1RON006	RONDANA PLANA $\frac{3}{16}$ X 1"	4