


## STEP 1


1. WITH THE HELP OF SOMEONE PLACE THE HEADBOARD IN TO CLEAN AND FLAT SURFACE, THEN PLACE THE SIDES AND ALIGN WITH THE PANEL WOOD USE THE PIN WOOD FOR GUIDE, PLACE THE PINWOOD IN HOLES AVAILABLE ON THE BOARD AS SHOWN IN PICTURE C. DO THIS ON BOTH SIDES.

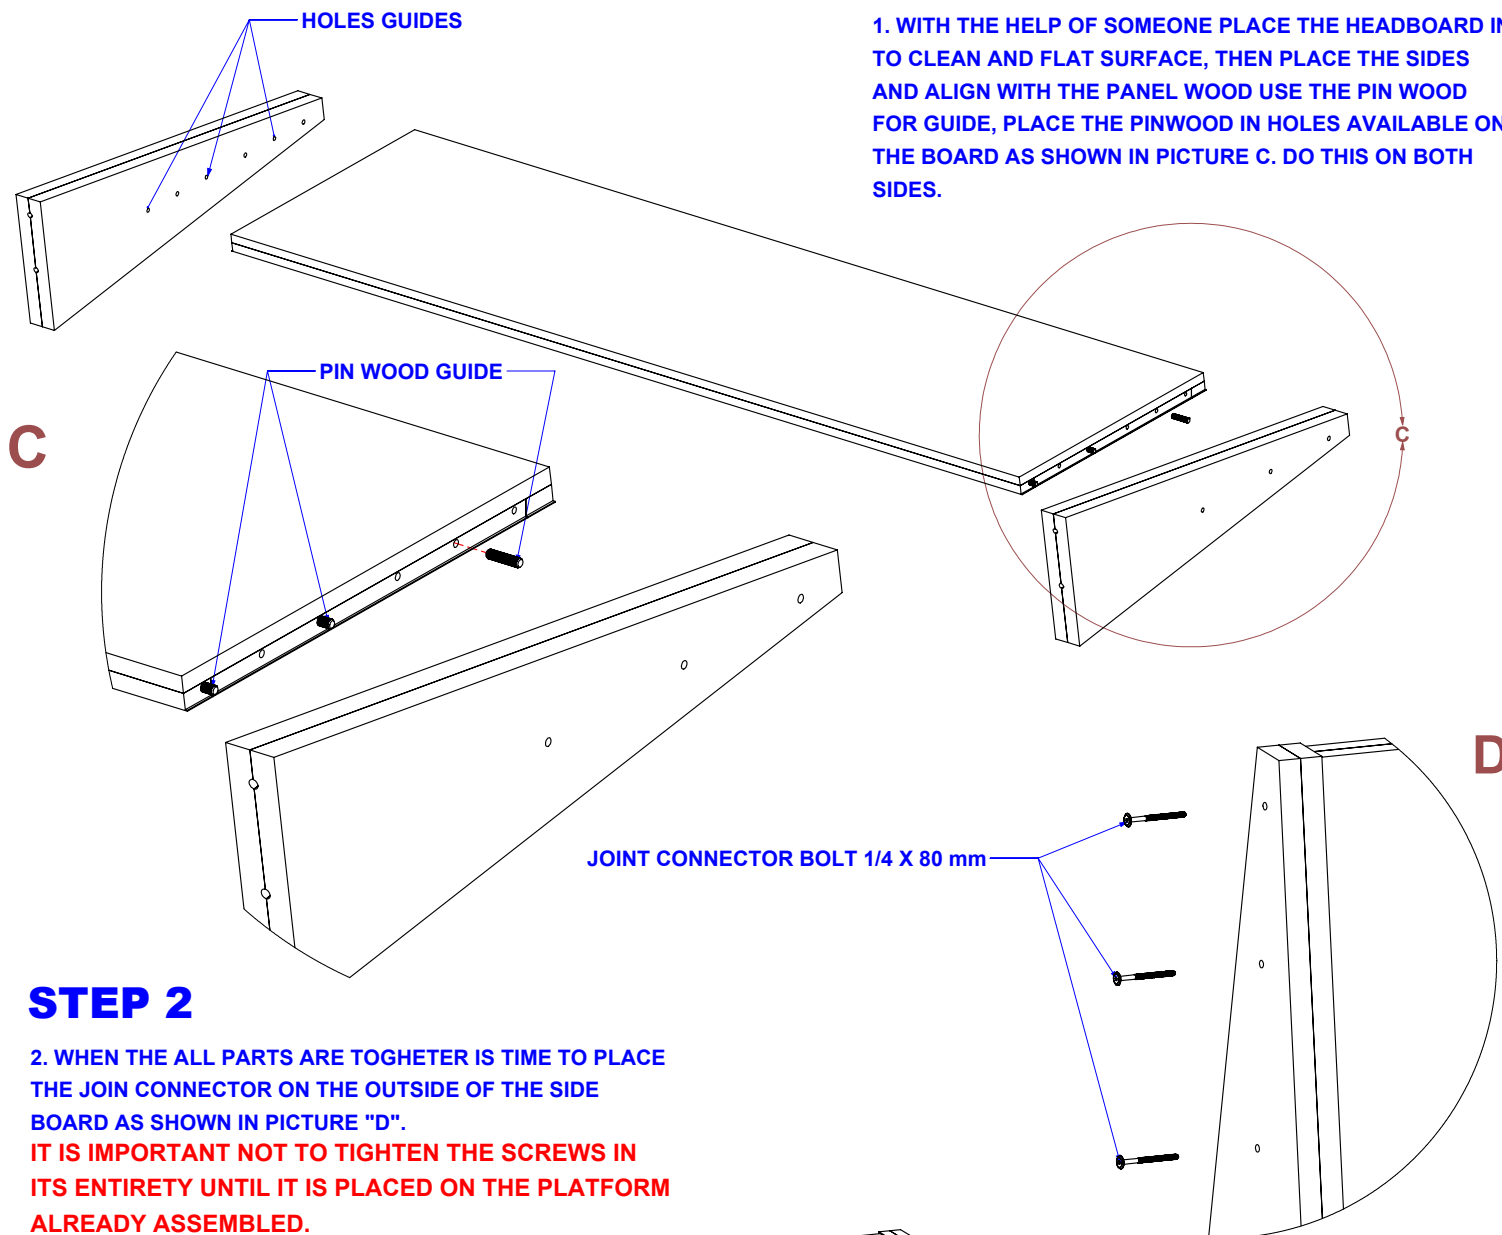

## STEP 2

2. WHEN THE ALL PARTS ARE TOGHETER IS TIME TO PLACE THE JOIN CONNECTOR ON THE OUTSIDE OF THE SIDE BOARD AS SHOWN IN PICTURE "D".

IT IS IMPORTANT NOT TO TIGHTEN THE SCREWS IN ITS ENTIRETY UNTIL IT IS PLACED ON THE PLATFORM ALREADY ASSEMBLED.

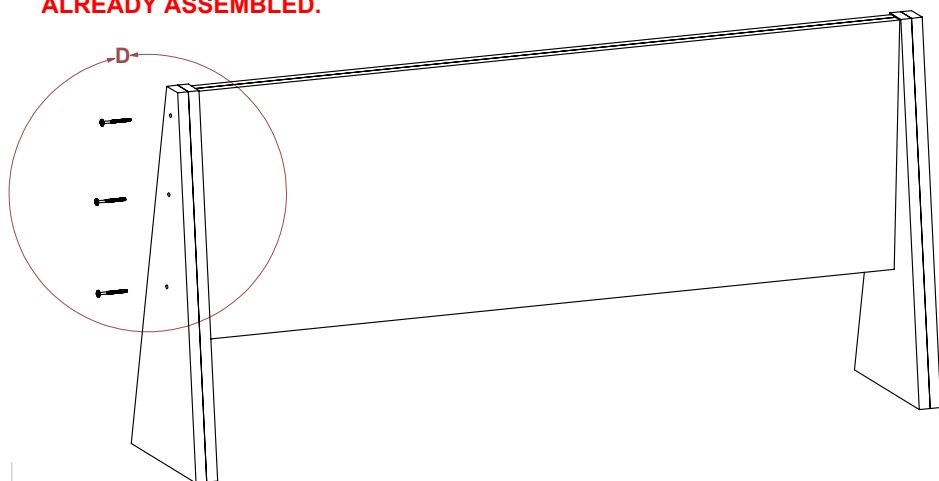

## STEP 3

3. FINALLY WHIT SOMEONE'S HELP AND VERY CAREFULLY PLACE THE HEADBOARD ON THE PLATFORM AND CONTINUE WHIT THE PLATFORM INSTRUCTIONS.

*ifd*

INTERNATIONAL  
FURNITURE DIRECT, LLC

### ASSEMBLING INSTRUCTIONS

I-HBD-E010

| DESCRIPTION                      | # |
|----------------------------------|---|
| JOINT CONNECTOR BOLT 1/4 x 80 mm | 6 |
| PIN WOOD                         | 8 |
| ALLEN KEY 5/32                   | 1 |

| ITEM    | DESCRIPTION                      | # |
|---------|----------------------------------|---|
| 1TOR103 | TORNILLO PERNO UNION 1/4 x 80 mm | 6 |
| 1HER250 | LLAVE ALLEN 5/32                 | 1 |
| 1PER002 | PERNO DE MADERA 8 X 40           | 8 |

*ifd*

INTERNATIONAL  
FURNITURE DIRECT, LLC

CODIGO:

COLECCION: