


ASSEMBLY INSTRUCTIONS

DO NOT FULLY TIGHTEN THE SCREWS UNTIL THE HEADBOARD IS ALIGNED WITH THE FOOTBOARD. ONCE ASSEMBLED, FINISH BY SECURELY TIGHTENING ALL SCREWS.


STEP 1

PLACE THE HEADBOARD FACE DOWN ON A FLAT, PADDED SURFACE (OR PROTECTIVE MAT). LOCATE THE 2 SIDE PANELS AS SHOWN IN FIGURES A AND B. NEXT, INSERT THE DOWELS 8 X 40 mm INTO BOTH ENDS, AS SHOWN IN DETAIL (A).

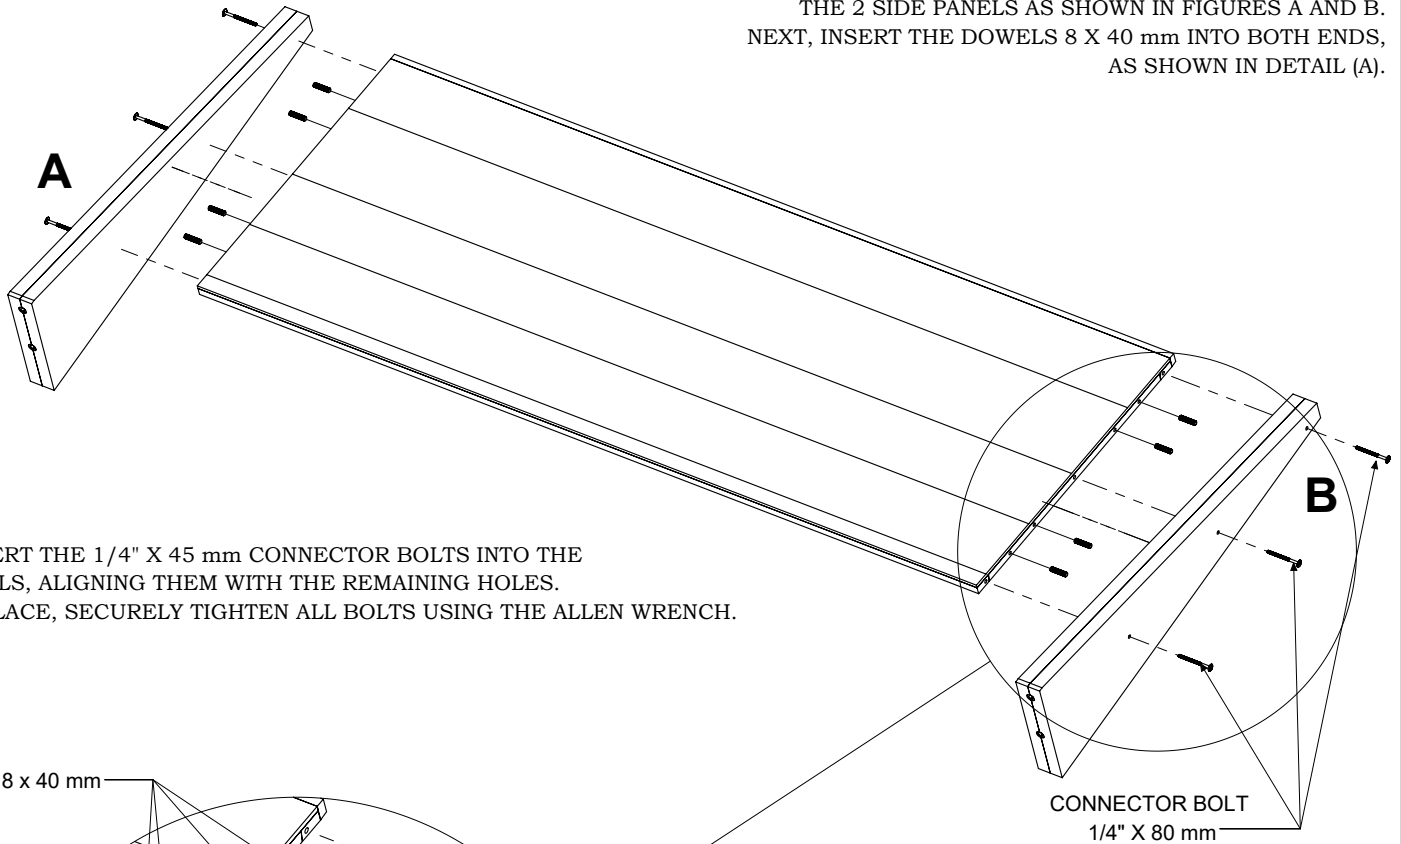

STEP 2

NEXT, INSERT THE 1/4" X 45 mm CONNECTOR BOLTS INTO THE SIDE PANELS, ALIGNING THEM WITH THE REMAINING HOLES. ONCE IN PLACE, SECURELY TIGHTEN ALL BOLTS USING THE ALLEN WRENCH.

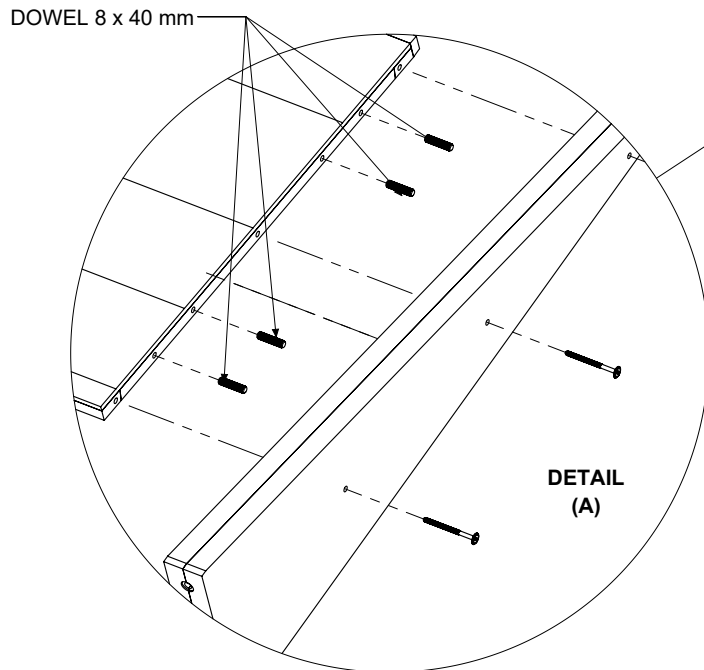

STEP 3

ONCE ALL HEADBOARD COMPONENTS ARE SECURELY ATTACHED, CAREFULLY LIFT THE HEADBOARD UPRIGHT AND PROCEED WITH THE REMAINING ASSEMBLY.



DESCRIPTION	#
CONNECTOR BOLT 1/4" X 80 mm	6
HEX KEY 5/32"	1
DOWEL 8 X 40	8

I-HBD-E012