




# ASSEMBLY INSTRUCTIONS

I-MIX-C022

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

## BASE

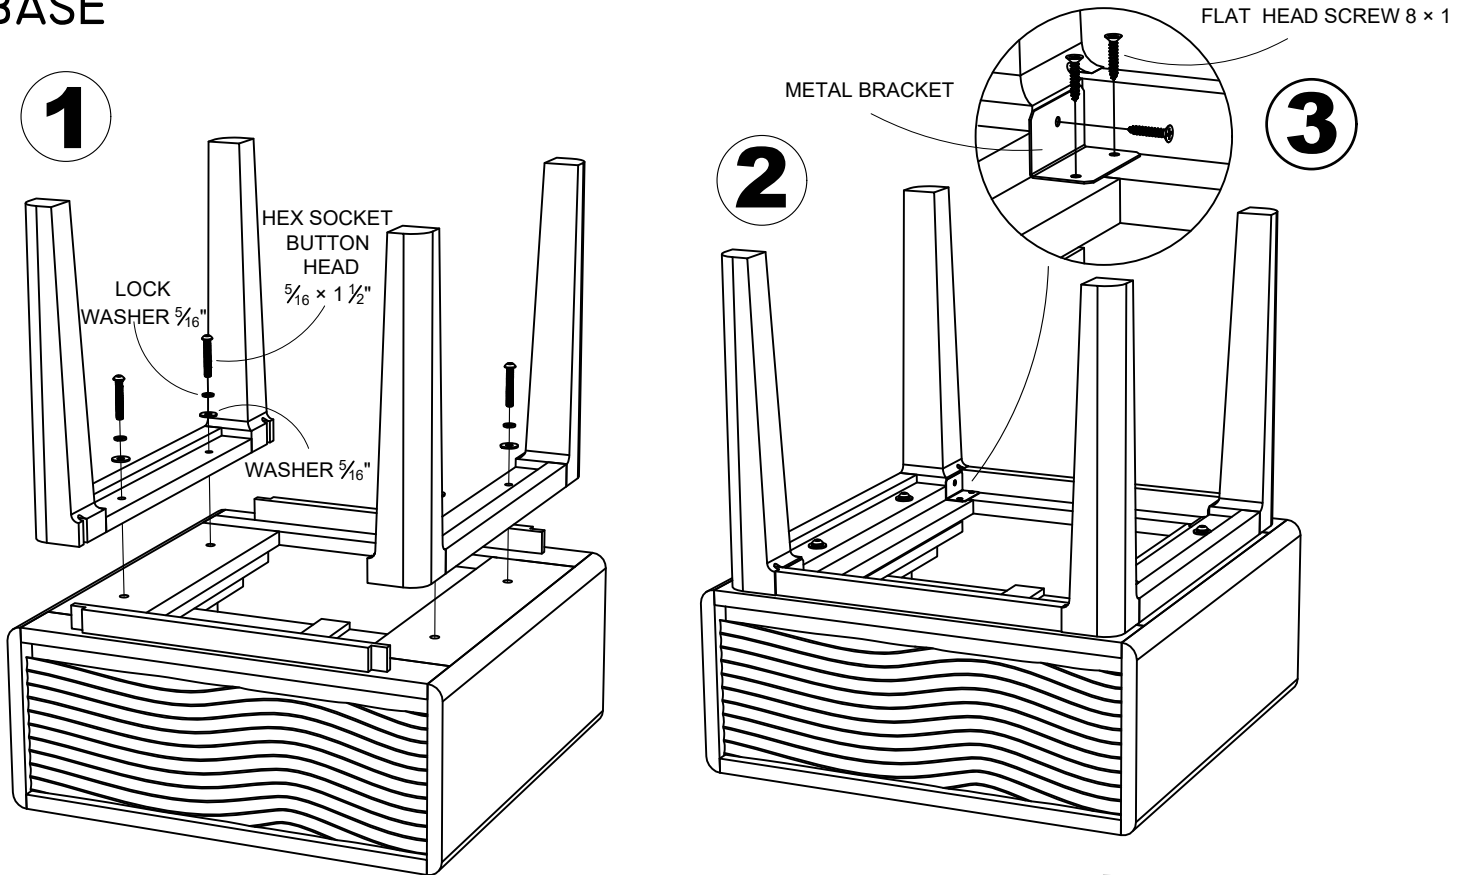

HARDWARE	
DESCRIPTION	PCS
ALLEN KEY $\frac{3}{16}$	1
HEX SOCKET BUTTON HEAD $\frac{5}{16} \times 1 \frac{1}{2}$ "	4
LOCK WASHER $\frac{5}{16}$	4
WASHER $\frac{5}{16}$	4
METAL BRACKET	4
FLAT HEAD SCREW $8 \times 1$	12

## INSTRUCTIONS

1. WITH HELP, TURN FACE DOWN THE TOP IN A CLEAN SURFACE.
2. PLACE THE LEGS, MATCHING THE SCREWS TO THE PRE-DRILLED HOLES AND FITTING IN THE TAB.
3. SCREW THE METAL BRACKETS TO EACH LEG, AS SHOWN IN THE FIGURE 3.
4. ASK FOR HELP TO TURN THE TABLE IN TO THE RIGHT POSITION.

