
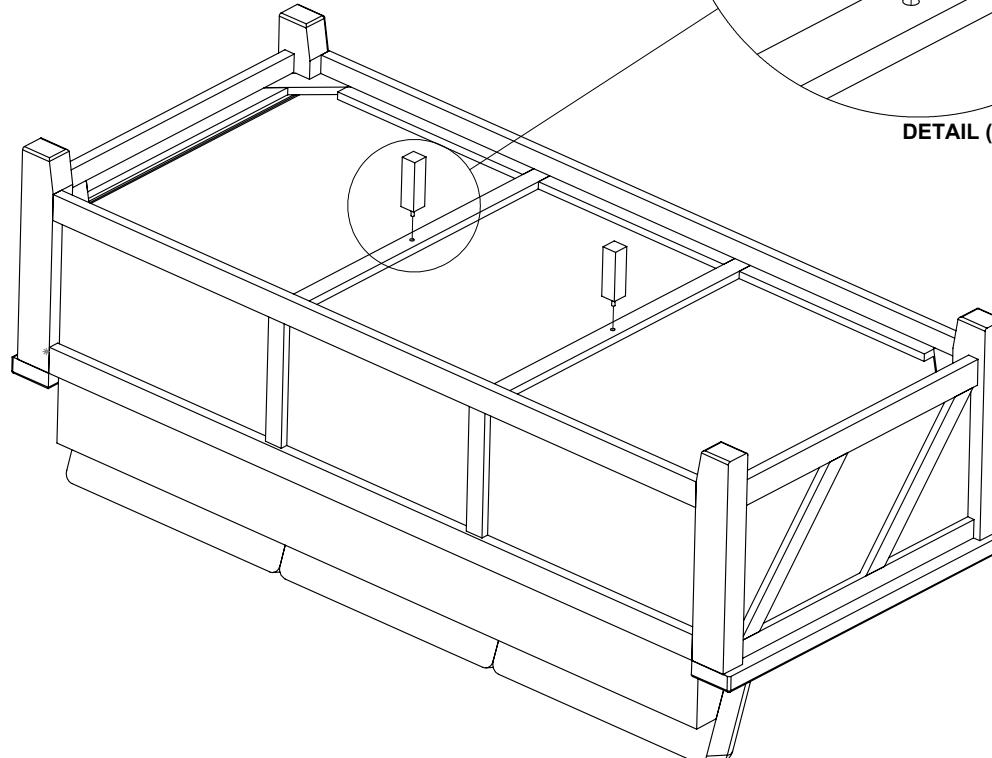


# ASSEMBLY INSTRUCTIONS

## SUPPORT INSTALLATION

THE IMAGES ARE FOR REFERENCE ONLY

1. PEOPLE REQUIRED: 2
2. PLACE THE SOFA UPSIDE DOWN ON A FLAT, CLEAN SURFACE.  
(USE A PROTECTIVE LAYER TO AVOID DAMAGE.)
3. LOCATE THE PRE-DRILLED HOLES ON THE BOTTOM SIDE OF THE FRAME, WHERE THE INSERT NUTS FOR SUPPORT ATTACHMENT ARE INSTALLED.
4. INSERT ONE SUPPORT INTO EACH HOLE.
5. TURN CLOCKWISE UNTIL FULLY TIGHTENED.  
DO NOT USE TOOLS.
6. VERIFY THAT ALL THE CENTER SUPPORT ARE SECURELY INSTALLED AND LEVEL.

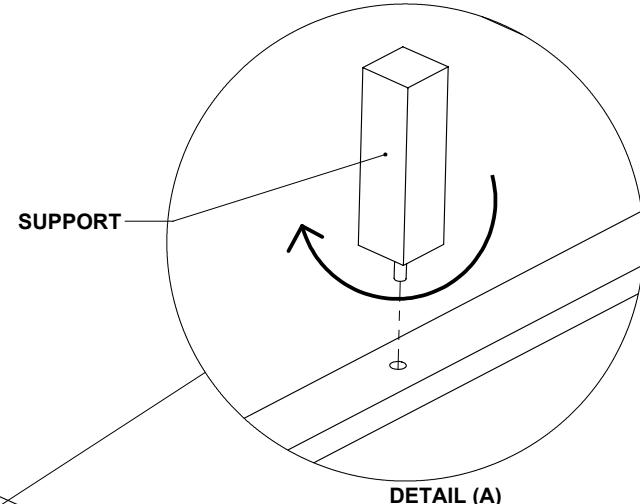

I-MIX-E021