
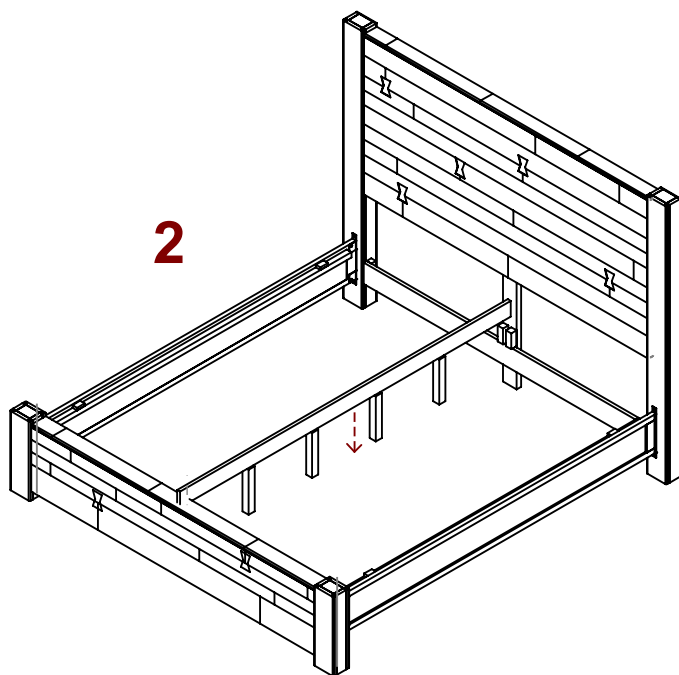


THE IMAGES ARE FOR REFERENCE ONLY

STEP 1

1.- ALIGN THE RAILS TO THE FOOTBOARD FIRST
2.- INSERT THE HARDWARE AS SHOWN IN FIG. 1,
THEN CONTINUE TO DO THE SAME WITH THE
HEAD BOARD

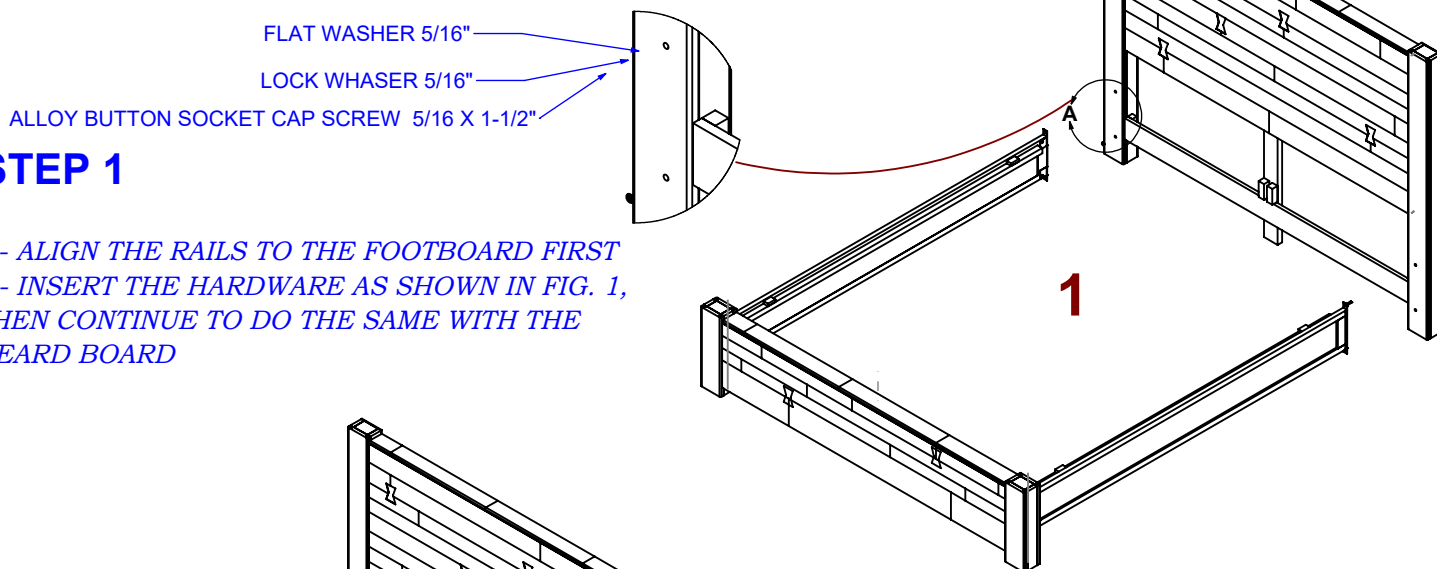


STEP 2

3.- IN THE CROSSBAR PERFORATION INSERT
THE LEGS AND PLACE THEM IN THE BRACKETS
ON THE BED AS SHOWN IN FIG. 2

STEP 3

4.- PLACE THE PALLETS ON THE CROSSBAR AS SHOWN
IN FIG. SHOWN IN FIG. 3

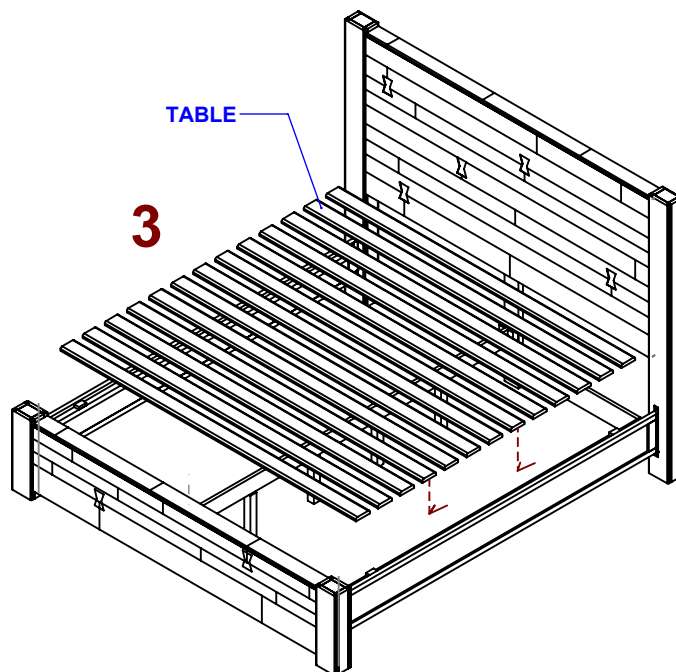

ASSEMBLY INSTRUCTIONS

I-PLT-E014

DESCRIPTION

ALLOY BUTTON SOCKET CAP
SCREW 5/16 X 1-1/2"

LOCK WASHER 5/16

PRESSURE WASHER 5/16

HEX KEY 3/16

#

8

8

8

1