

ASSEMBLY INSTRUCTIONS

STEP 1 - PREPARE THE FIRST PLATFORM

POSITION THE RAILS TOGETHER WITH ONE PLATFORM, MAKING SURE TO USE THE PLATFORM THAT WILL BE CONNECTED TO THE HEADBOARD. ENSURE THE METAL SUPPORT BRACKET TAB FACES INWARD AND THAT THE UPPER RAIL HOLES ARE POSITIONED ON THE HEADBOARD SIDE, AS SHOWN IN DETAIL (A).

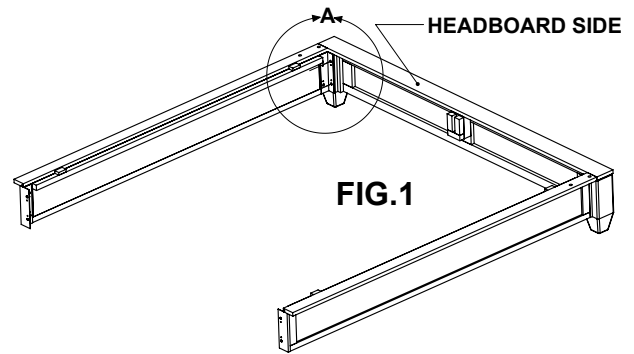
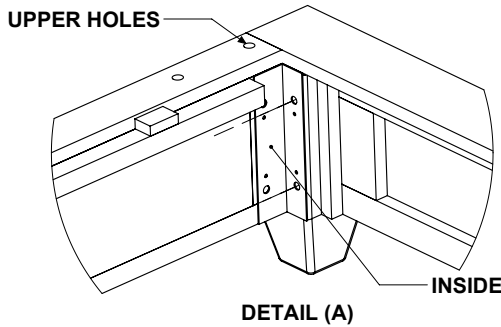


FIG.1


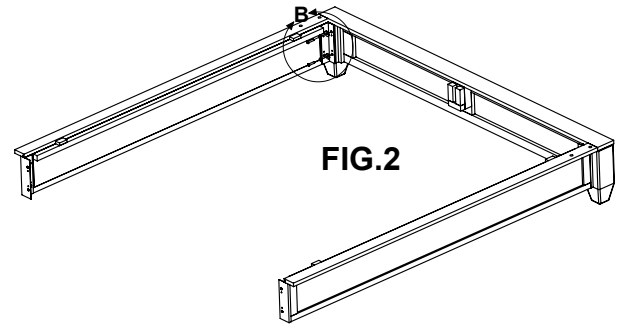


FIG.2

STEP 2 - SECURE THE RAILS TO THE PLATFORM

ALIGN THE RAILS AND INSERT THE SCREWS, FLAT WASHERS, AND LOCK WASHERS FROM THE INSIDE AS SHOWN IN DETAIL B. REPEAT THE PROCEDURE ON THE OPPOSITE CORNER. DO NOT FULLY TIGHTEN THE HARDWARE UNTIL THE ENTIRE ASSEMBLY HAS BEEN COMPLETED AND PROPERLY ALIGNED.

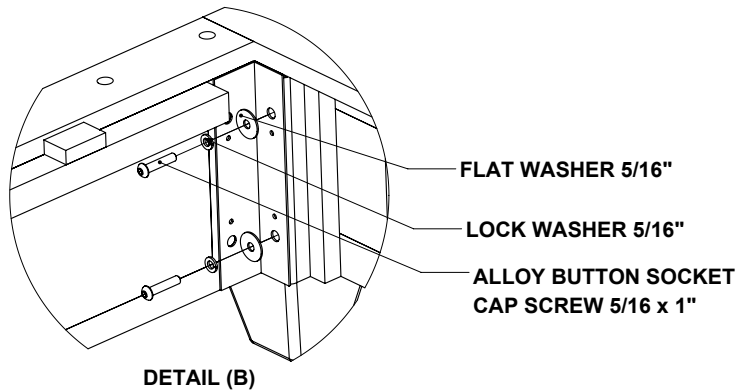

DETAIL (B)

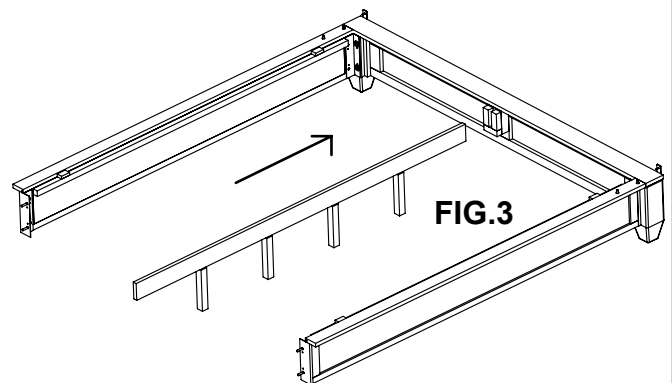


FIG.3

STEP 3 - INSTALL THE CENTER CROSSBAR

ONCE THE FIRST PLATFORM HAS BEEN ASSEMBLED, ATTACH THE CENTER SUPPORT LEGS TO THE CENTER CROSSBAR.. THEN SLIDE THE CROSSBAR INTO POSITION AS SHOWN IN FIGURE 3.

STEP 4 - INSTALL THE SECOND PLATFORM

WITH THE ASSISTANCE OF ANOTHER PERSON, POSITION THE SECOND PLATFORM AND INSTALL THE SCREWS, FLAT WASHERS, AND LOCK WASHERS FOLLOWING THE SAME PROCEDURE DESCRIBED IN STEP 2. MAKE SURE THE CENTER CROSSBAR SLIDES PROPERLY INTO THE PLATFORM SUPPORT AS SHOWN IN FIGURE 4.

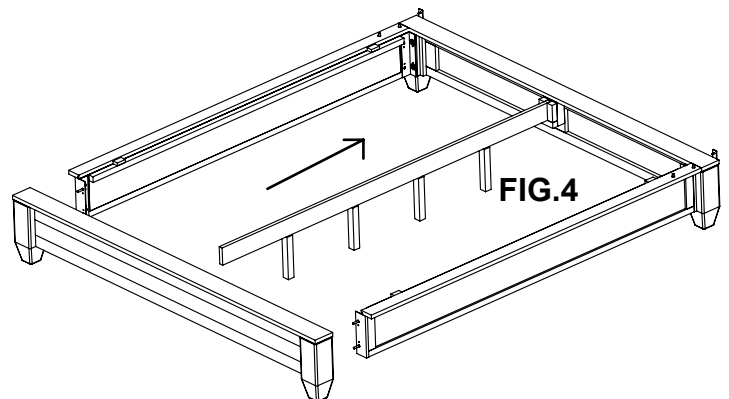



FIG.4



DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1"	8
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 2"	4
LOCK WASHER 5/16 "	12
FLAT WASHER 5/16 X 1"	12
METAL SUPPORT	2
PAN HEAD SCREW 8 X 1	4
HEX KEY 3/16	1

ASSEMBLY INSTRUCTIONS

FIG.5

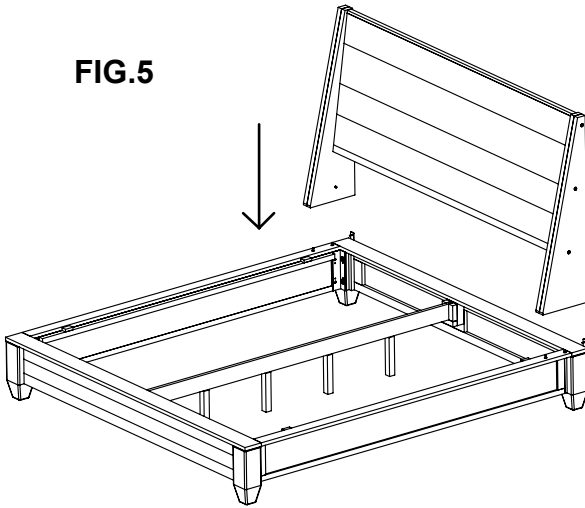

STEP 5 - POSITION THE HEADBOARD

PLACE THE HEADBOARD ONTO THE ASSEMBLED PLATFORM WITH THE UPPER HOLES FACING THE CORRECT DIRECTION. ALIGN ALL MOUNTING HOLES AS SHOWN IN FIGURE 5.

STEP 6 - SECURE THE HEADBOARD AND METAL BRACKETS

INSERT THE SCREWS FROM UNDERNEATH THE RAILS TO SECURE THE HEADBOARD, AS SHOWN IN DETAIL C. THEN INSTALL THE METAL SUPPORT BRACKETS AS SHOWN IN DETAIL D.

ON THE BACK OF THE HEADBOARD-TO-PLATFORM CONNECTION USING THE PROVIDED PAN HEAD SCREWS. KEEP ALL HARDWARE SLIGHTLY LOOSE UNTIL THE ASSEMBLY IS COMPLETE.


STEP 7 - TIGHTEN ALL HARDWARE

ONCE THE HEADBOARD IS PROPERLY INSTALLED, SECURELY TIGHTEN ALL HARDWARE USED DURING ASSEMBLY. IT IS RECOMMENDED TO BEGIN WITH THE PLATFORM HARDWARE, CONTINUE WITH THE HEADBOARD HARDWARE, AND FINISH WITH THE HARDWARE CONNECTING BOTH SECTIONS.

STEP 8 - INSTALL THE SUPPORT SLATS

VERIFY THAT THE CENTER CROSSBAR, SUPPORT LEGS, AND ALL HARDWARE ARE SECURELY INSTALLED AND TIGHTENED., SUPPORT LEGS, AND ALL HARDWARE ARE SECURELY INSTALLED. FINALLY, PLACE THE SUPPORT SLATS ONTO THE RAILS AS SHOWN IN FIGURE 8.

FIG.6

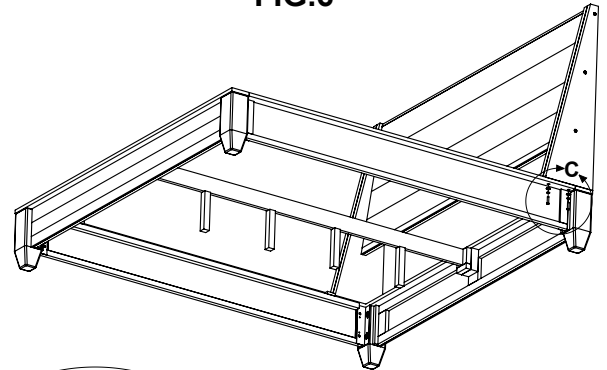


FLAT WASHER 5/16"

LOCK WASHER 5/16"

ALLOY BUTTON SOCKET
CAP SCREW 5/16 x 2"

DETAIL (C)

FIG.7

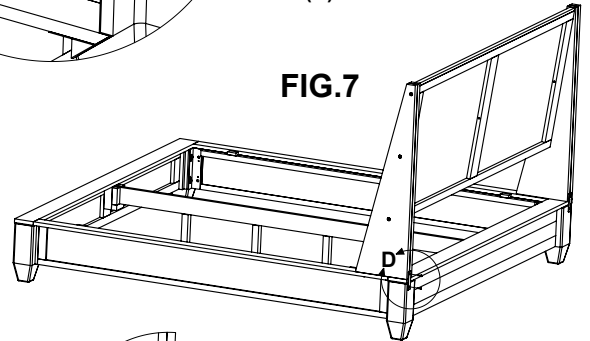


PAN HEAD
SCREW 8X1

METAL SUPPORT

DETAIL (D)

FIG.8

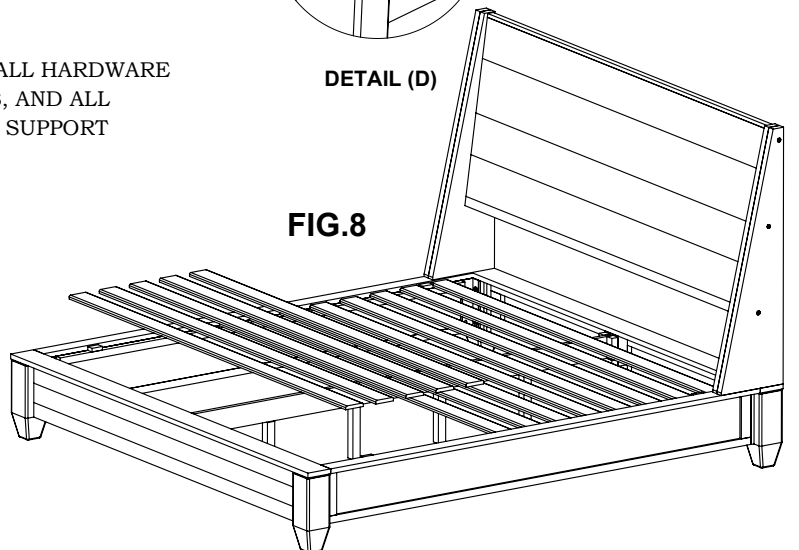

DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1"	8
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 2"	4
LOCK WASHER 5/16 "	12
FLAT WASHER 5/16 X 1"	12
METAL SUPORT	2
PAN HEAD SCREW 8 X 1	4
HEX KEY 3/16	1