



STEP 1

WITH THE HELP OF A PERSON, PLACE THE RAIL, ALIGNING THE HOOK WITH THE BED POST GROOVE. SHOWN IN FIGURES (A) (A1)

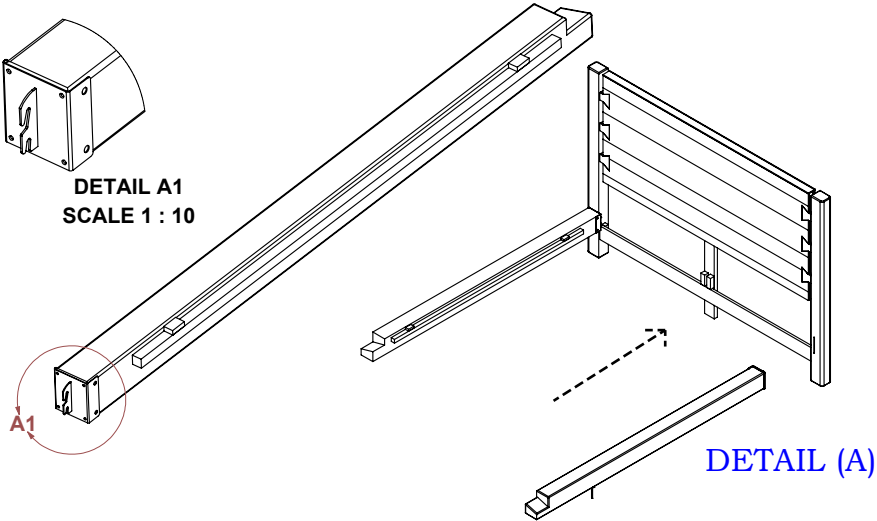



STEP 2

PLACE THE WOODEN DOWELS IN THE BEAM, THEN TIGHTEN, ALIGNING THEM WITH THE RAIL HOLES. SHOWN IN DETAIL B AND B1.

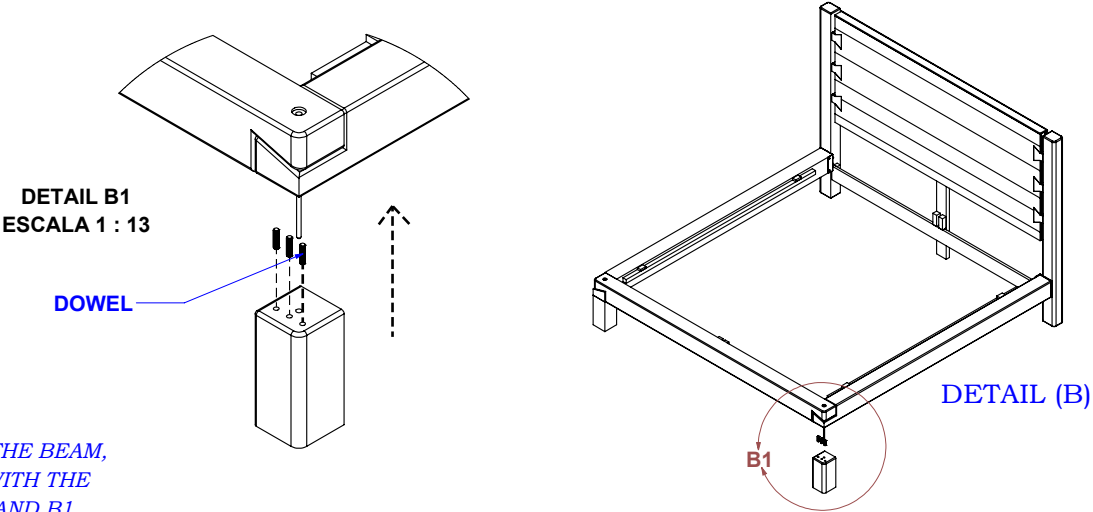

STEP 3

PLACE THE WOODEN DOWELS IN THE BEAM, THEN TIGHTEN, ALIGNING THEM WITH THE RAIL HOLES. SHOWN IN DETAIL B AND B1.

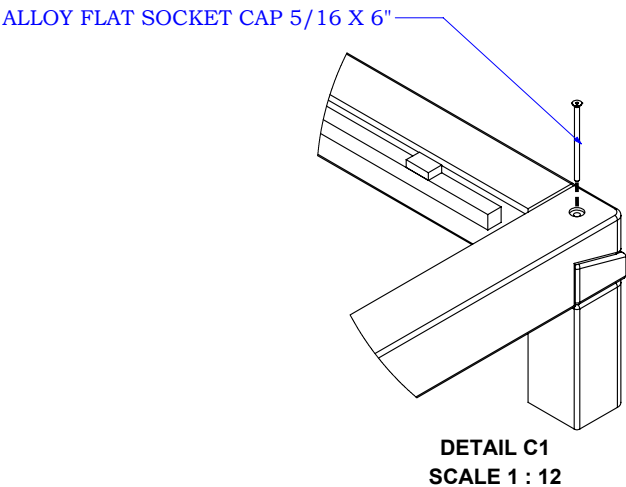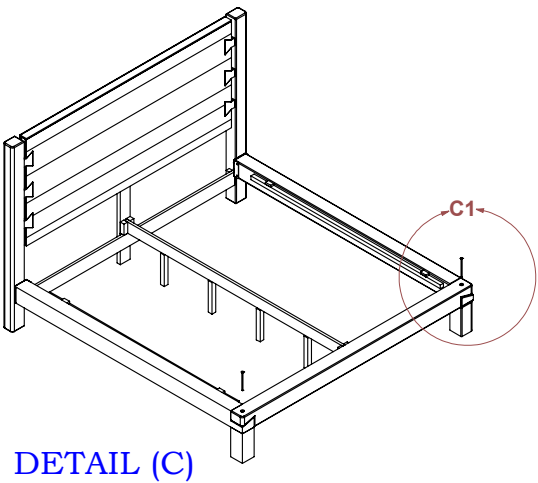


ASSEMBLING INSTRUCTIONS

I-PLT-E021


#	DESCRIPTION
2	ALLOY FLAT SOCKET CAP 5/16 X 6"
1	HEX KEY 3/16"
6	WOOD DOWEL 10X50

STEP 4

PLACE ALL THE BLOCKS ON THE CROSSBEAM, THEN POSITION THE CROSSBEAM INTO THE HEADBOARD AND FOOTBOARD GROOVES. SHOWN IN DETAIL D AND D1.

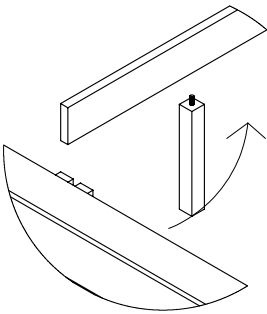


DETAIL D1
SCALE 1 : 15

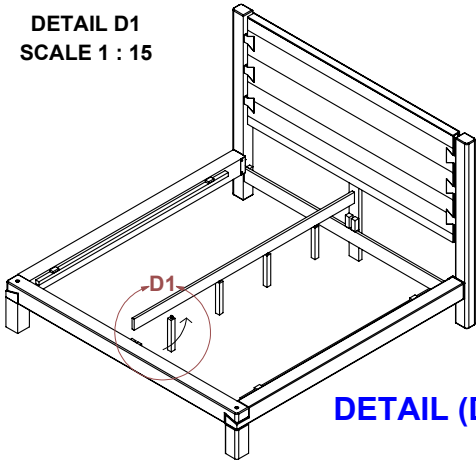

DETAIL (D)


STEP 5

FOR THE FINAL STEP, PLACE THE FLOORBOARD, ALIGNING IT WITH THE STOP SHOWN IN DETAIL E, E1.

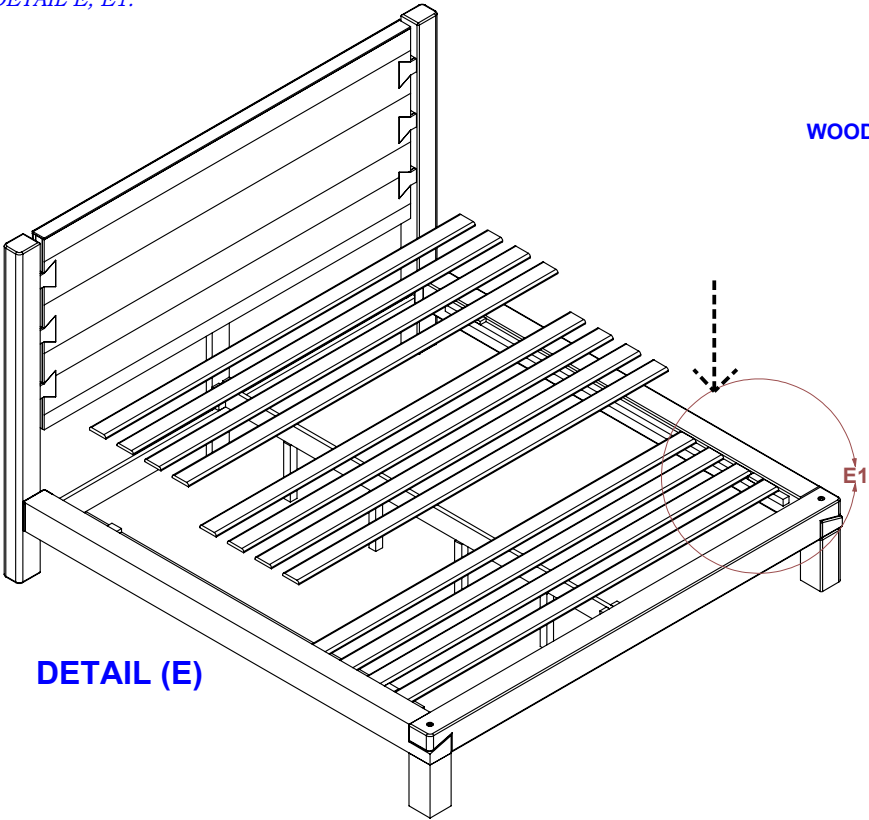

DETAIL (E)

WOODEN STOPPER

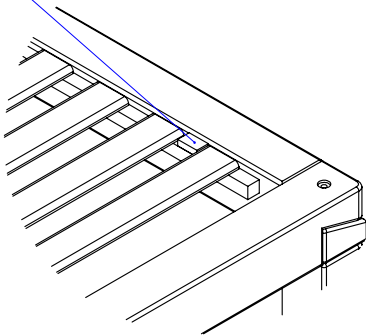

DETAIL E1
SCALE 1 : 14



ASSEMBLING
INSTRUCTIONS

I-PLT-E021

#	DESCRIPTION
2	ALLOY FLAT SOCKET CAP 5/16 X 6"
1	HEX KEY 3/16"
6	WOOD DOWEL 10X50