

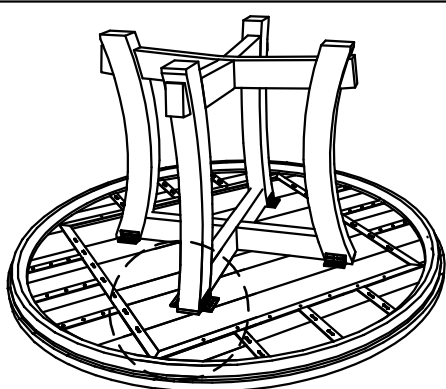
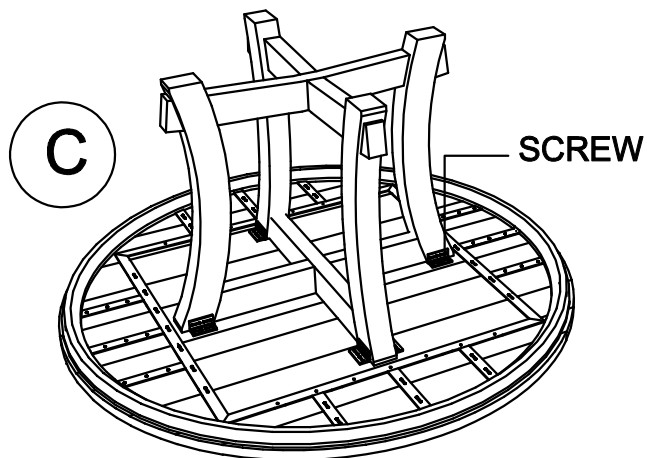


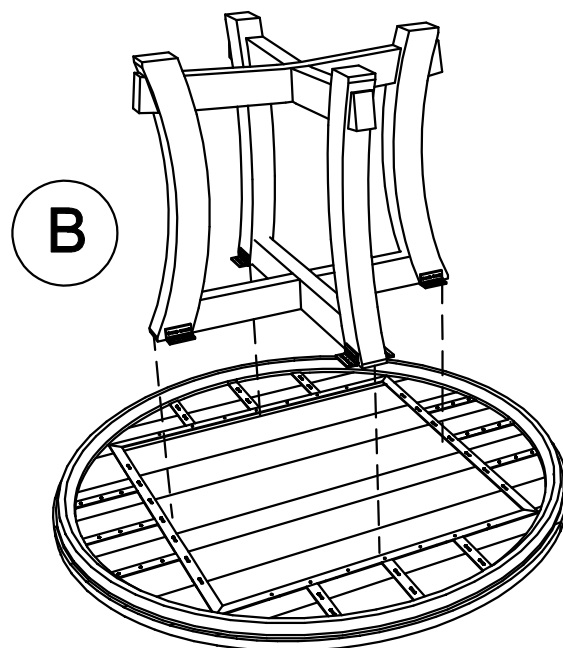

ASSEMBLY INSTRUCTIONS

I-RND-C001

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

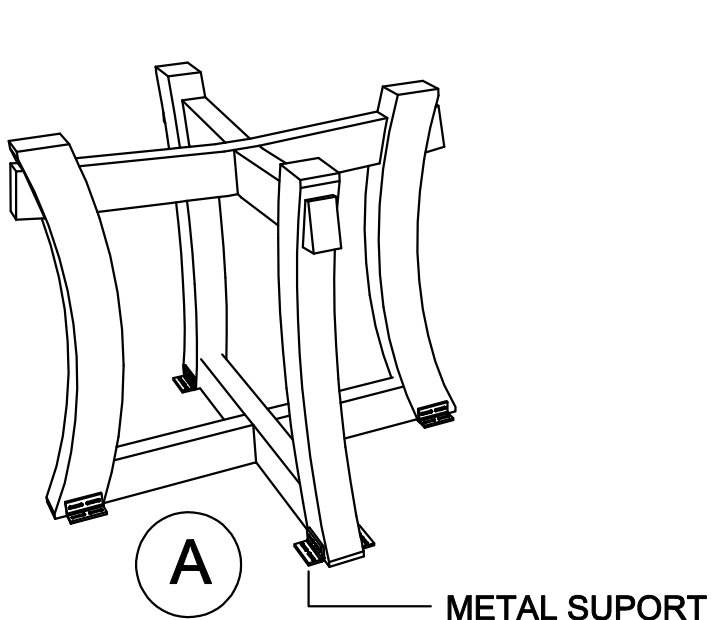

**IMPORTANT: DON'T PLACE THE BASE IN
DIAGONAL SIDE**

HARDWARE

DESCRIPTION	# PCS
FLAT HEAD SCREW 8 X 3/4"	16

INSTRUCTIONS:

1. USE A FLAT AND CLEAN AREA FOR ASSEMBLING. TURN THE BASE, WITH THE METAL SUPORT LOOKING TO THE FLAT AREA, AS SHOW IN DRAWING "A".
2. PLACE THE TOP OF THE TABLE UPSIDE DOWN, OVER A FLAT AND CLEAN SURFACE.
3. PLACE THE BASE OVER THE TOP " BY ENIGNERY IS IMPORTANT ALIGN THE LEGS WITH THE CENTER OF METAL TOP" AND SCREW AS SHOW IN DRAWING "B" & "C"
4. TURN THE TABLE AND PLACE IT ON HE DESIRED LOCATION.