


THE IMAGES ARE FOR REFERENCE ONLY.

STEP 1: INITIAL PREPARATION

WITH THE HELP OF ANOTHER PERSON, PLACE THE TABLETOP ON A CLEAN, FLAT SURFACE WITH THE SIDE FEATURING HOLES FACING UPWARD.

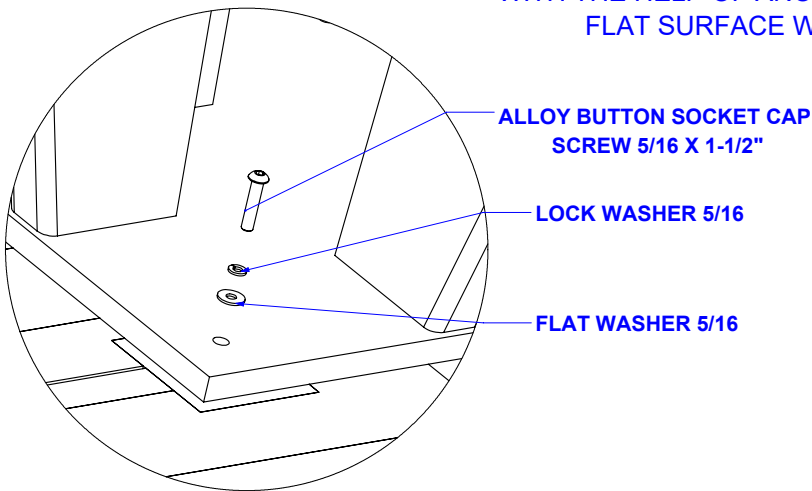


STEP 2: POSITION THE BASE

ALIGN THE BASE WITH THE HOLES ON THE TABLETOP. MAKE SURE ALL HOLES LINE UP PROPERLY FOR SCREW INSTALLATION.


STEP 3: FASTEN THE BASE

INSERT THE 5/16" X 1½" SCREWS THROUGH THE FLAT AND LOCK WASHERS, THEN INTO THE ALIGNED HOLES. TIGHTEN USING THE SUPPLIED 3/16" HEX KEY.

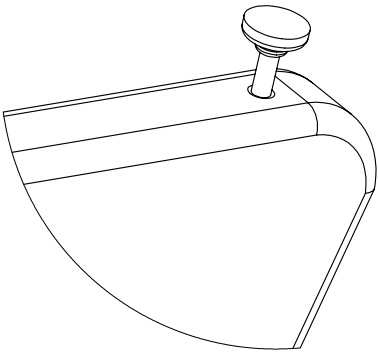

STEP 4: FINAL POSITIONING

WITH THE HELP OF ANOTHER PERSON, CAREFULLY TURN THE TABLE TO ITS UPRIGHT POSITION AND PLACE IT IN THE DESIRED LOCATION.

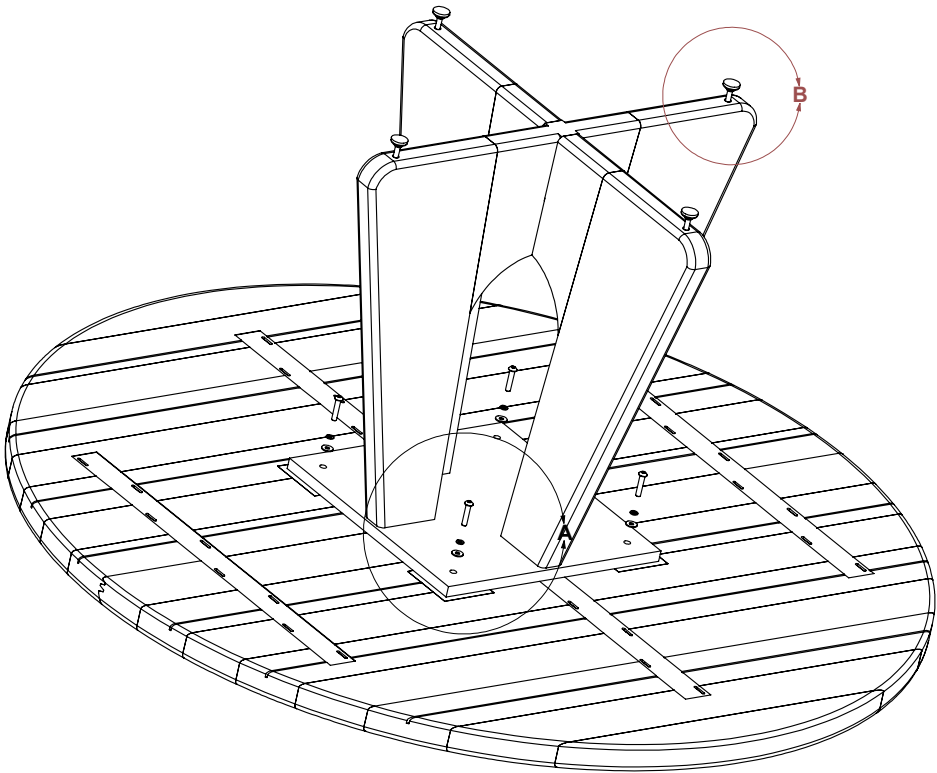

STEP 5: LEVELING

THE TABLE INCLUDES LEVELERS. ONCE POSITIONED, ADJUST THE LEVELERS UNTIL THE TABLE IS STABLE AND EVEN ON THE SURFACE.



ASSEMBLY  
INSTRUCTIONS

I-RNDTP-E004

| DESCRIPTION                                 | # |
|---|---|
| ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1-1/2" | 4 |
| FLAT WASHER 5/16                            | 4 |
| LOCK WASHER 5/16                            | 4 |
| HEX KEY 3/16                                | 1 |