
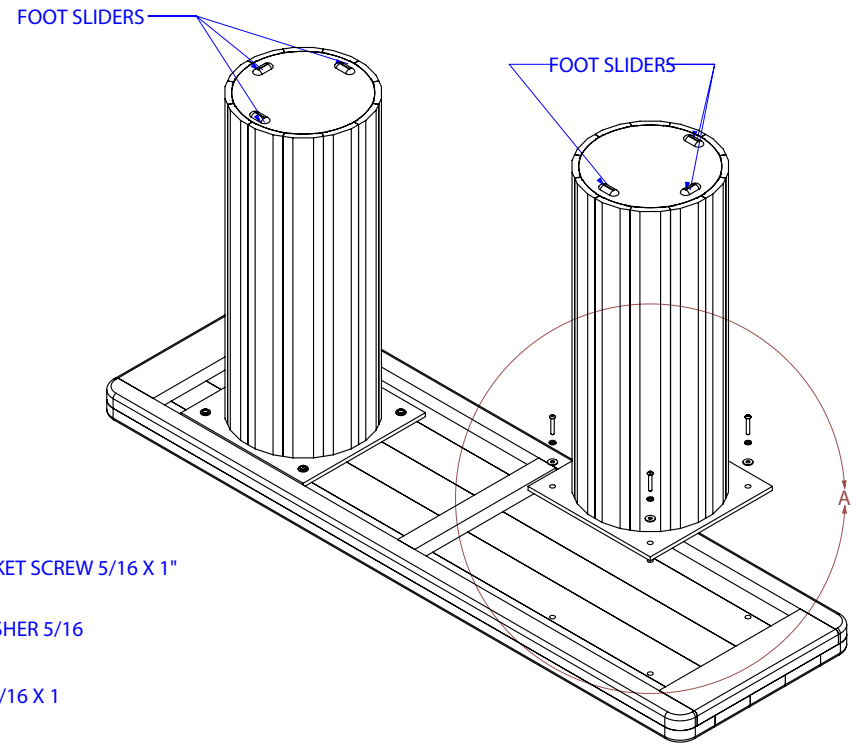


STEP 1

WITH SOMEONE'S HELP, WE FLIP THE TOP OVER,
ALIGN THE HOLES THE BOTH PARTS AND PLACE THE BASE
INSERT THE SCREWS AS SHOWN IN FIG. A

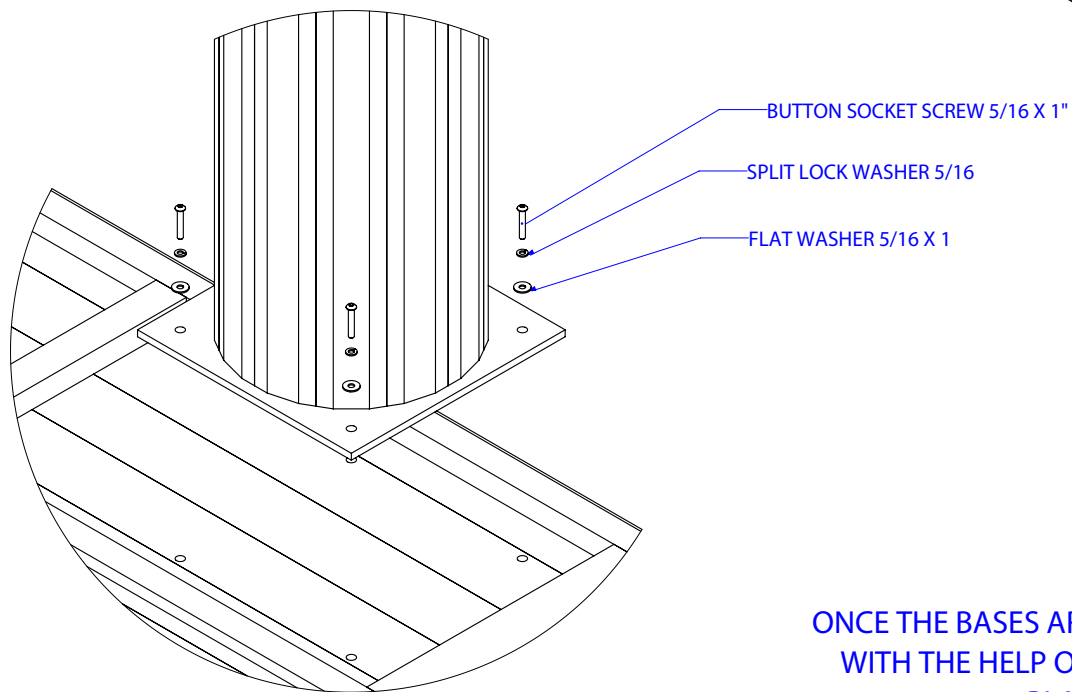

STEP 2

ONCE THE BASES ARE SCREWED TOGETHER WITH THE TOP,
WITH THE HELP OF SOMEONE WE FLIP THE FURNITURE AND
PLACE IT IN THE DESIRED LOCATION



ITEM:

ASSEMBLING INSTRUCTIONS

I-SOF-E002

DESCRIPTION	#
BUTTON SOCKET SCREW 5/16 X 1"	8
SPLIT LOCK WASHER 5/16	8
FLAT WASHER 5/16 X 1	8
ALLEN KEY 3/16	1