


STEP 1

THE IMAGES ARE FOR REFERENCE ONLY

WITH SOMEONE HELP PLACE THE TABLE IN TO THE FLAT AND CLEAN SURFACE, LATER PLACE THE LEGS IN THE CORNERS OF THE TABLE AND ALIGN WITH THE PERFORATIONS AS SHOWN IN FIG. 1

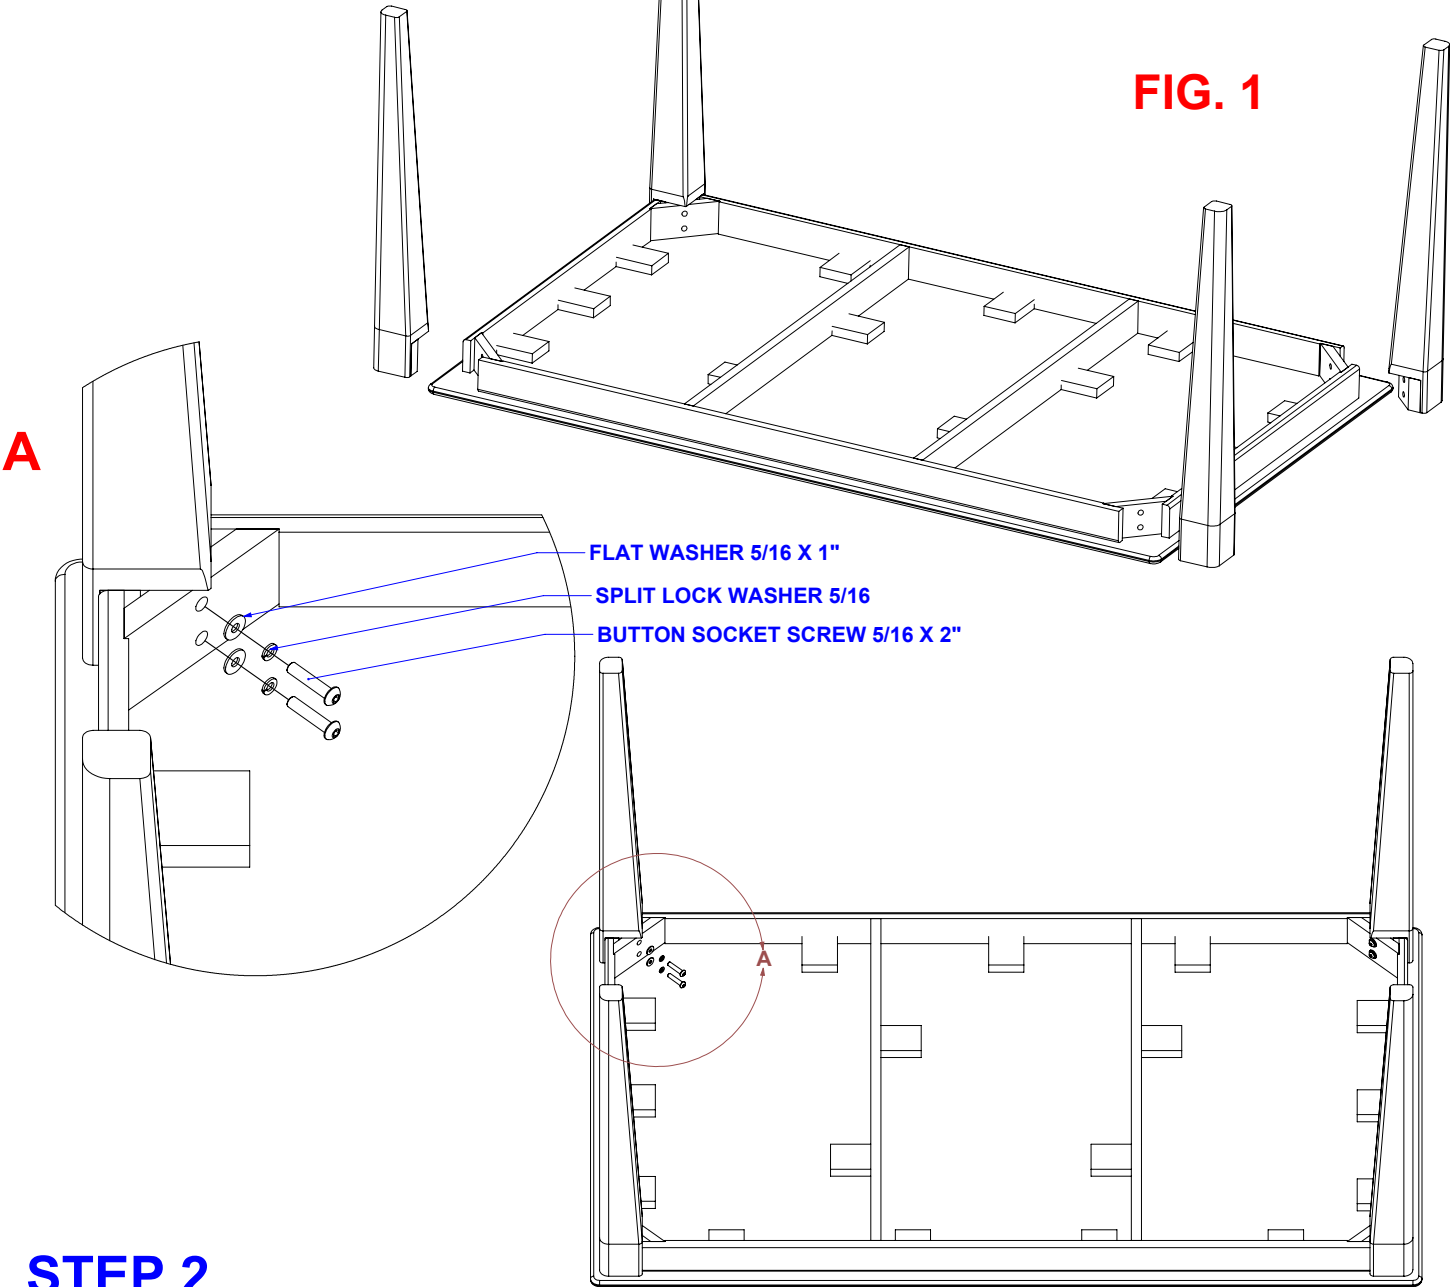

STEP 2

2. WHEN THE LEGS ARE IN THE CORRECT PLACE IS TIME TO INSERT THE SCREW AS SHOWN IN PICTURE A AND REPEAT THE STEPS IN THE 4 SETTINGS.
3. FINALLY WITH THE SOMEONE HELP PLACE THE TABLE IN THE CORRECT POSITIONS.



ASSEMBLY INSTRUCTIONS

I-TBL-E016

DESCRIPTION	#
FLAT WASHER 5/16 X 1"	8
SPLIT LOCK WASHER 5/16"	8
BUTTON SOCKET SCREW 5/16 X 2"	8
ALLEN KEY 3/16	1

ITEM	DESCRIPTION	#
1RON003	RONDANA PLANA 5/16 X 1	8
1RON011	RONDANA DE PRESION 5/16	8
1TOR004	TORNILLO ALLEN CAB. BOLA 5/16 X 2"	8
1HER251	LLAVE ALLEN 3/16	1



ASSEMBLY INSTRUCTIONS

I-TBL-E016