


**A**

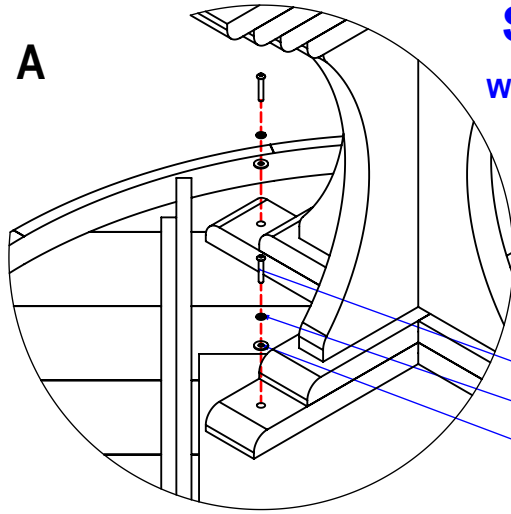


## STEP 1

WITH THE HELP OF SOMEONE WE PUT THE COVER UPSIDE DOWN.  
UPSIDE DOWN, PAY ATTENTION TO PLACE THE SCREWS  
SCREWS MENTIONED IN THE TABLE AND FIGURE A

BUTTON SOCKET SCREW 5/16 X 1 1/2"

SPLIT LOCK WASHER 5/16

FLAT WASHER 5/16 X 1"

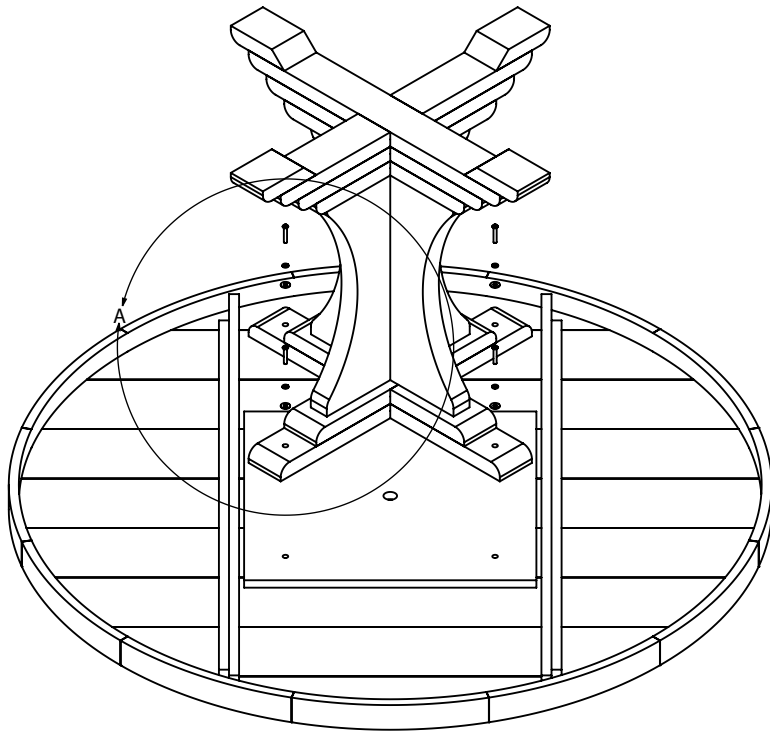

## STEP 2

THEN WITH THE HELP OF SOMEONE WE TURN  
THE DINING ROOM AND PLACE IT IN THE  
DESIRED LOCATION

| DESCRIPTION                       | # |
|-----------------------------------|---|
| BUTTON COCKET SCREW 5/16 X 1 1/2" | 4 |
| SPLIT LOCK WASHER 5/16            | 4 |
| FLAT WASHER 5/16 X 1"             | 4 |
| ALLEN KEY 3/16                    | 1 |



**ASSEMBLING  
INSTRUCTIONS**

**I-TBL-E022 :**