



ASSEMBLY INSTRUCTIONS

STEP 1

WITH THE HELP OF SOMEONE, TURN THE LEGS ON A FLAT SURFACE, THEN PLACE THE CROSSBAR. THEN INSERT THE SCREW SHOWN IN DETAIL A1, ALIGNING IT WITH THE HOLES, AND REPEAT ON THE OTHER LEG.

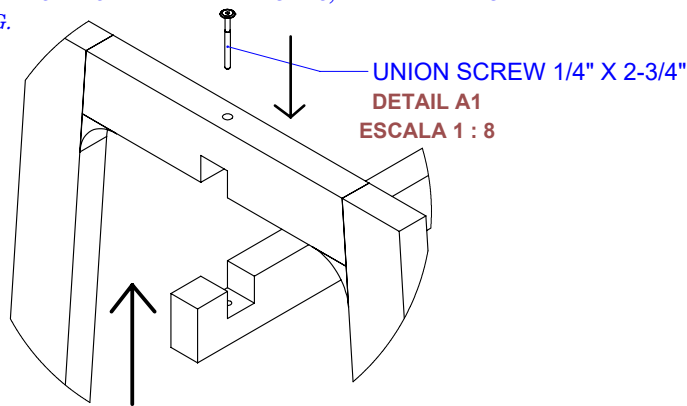


[A]

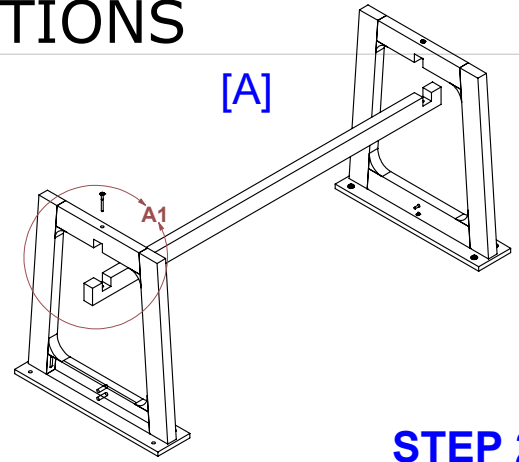


STEP 2

THEN INSTALL THE TOP CROSSBAR USING THE HARDWARE AS SHOWN IN FIGURE B1, ALIGN IT WITH THE HOLES, AND REPEAT THE SAME ACTION ON THE OPPOSITE SIDE.


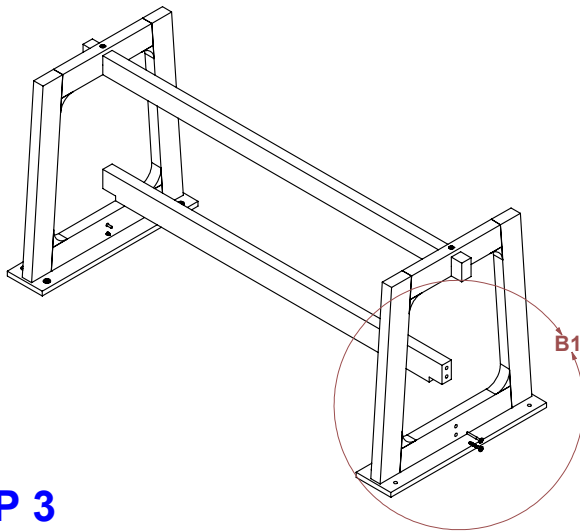


UNION SCREW 1/4" X 2-1/2"

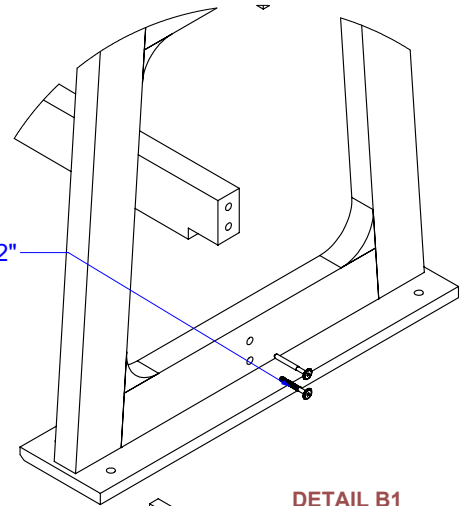

STEP 3

FINALLY, TURN THE TOP ON A FLAT SURFACE, PLACE THE PREVIOUSLY ASSEMBLED BASE AND ALIGN IT WITH THE HOLES ON THE TOP. INSTALL THE HARDWARE SHOWN IN DETAIL C1, TIGHTEN, AND PLACE THE TABLE IN THE DESIRED LOCATION.

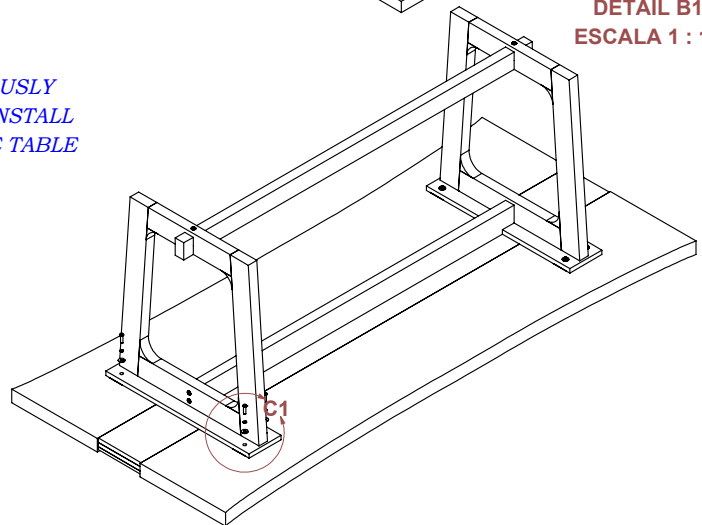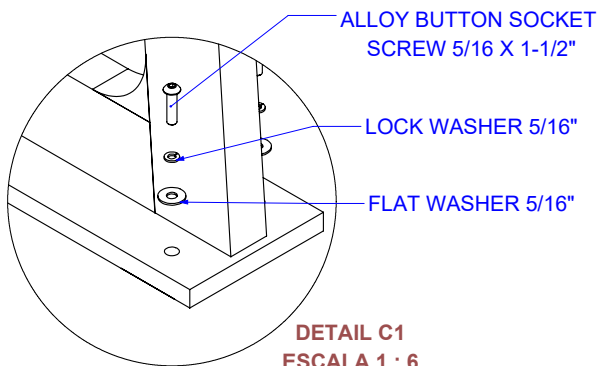

DESCRIPTION	#
CONNECTOR BOLT 1/4 X 2-3/4"	2
CONNECTOR BOLT 1/4 X 2-1/2"	4
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1-1/2"	8
LOCK WASHER 5/16"	8
FLAT WASHER 5/16"	8
HEX KEY 3/16"	1
HEX KEY 5/32"	1