
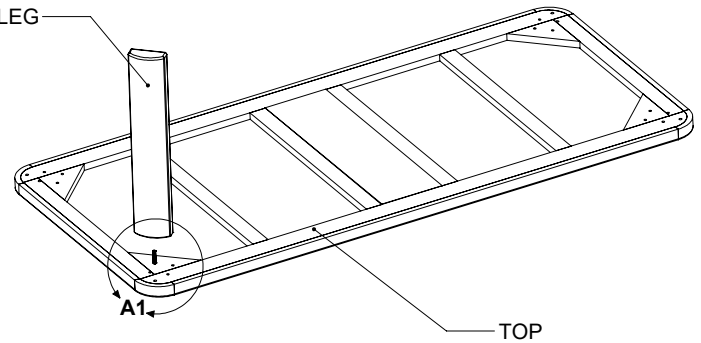


ASSEMBLY INSTRUCTIONS

REFERENCE IMAGES



STEP 1: POSITIONING THE TOP AND INSERTING THE DOWEL

WITH THE HELP OF SOMEONE ELSE PLACE THE TOP ON A FLAT SURFACE.
PLACE THE LEG IN POSITION AS SHOWN IN DETAIL A1,
INSERT THE WOOD DOWEL (10 X 40) INTO THE HOLE OFF THE TABLE LEG

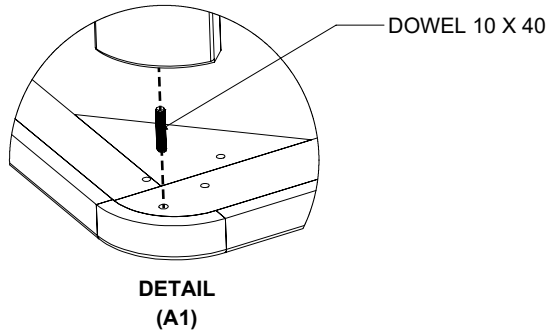




STEP 2: INSTALLING THE METAL BRACKET

PLACE THE METAL BRACKET, ALIGNING IT WITH THE HOLES AS SHOWN IN DETAIL B1.

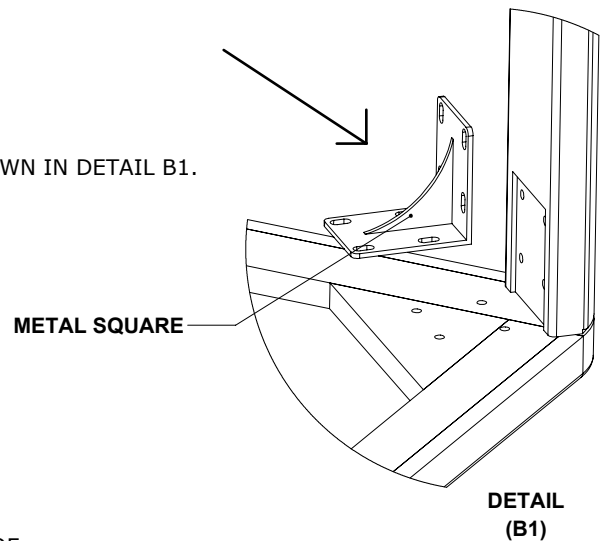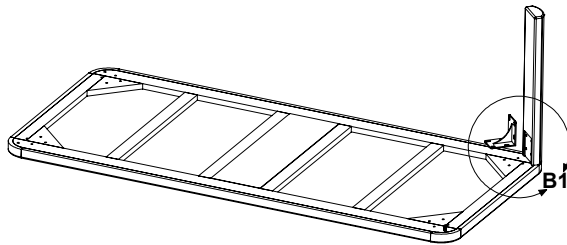

STEP 3: FINAL SECURING WITH HARDWARE

INSERT THE SCREWS (CONNECTOR BOLT 1/4" X 3/4") INTO HOLES OF
THE LEG AND TABLE. REPEAT IT FOR THE REMAINING LEGS,
AS SHOWN IN DETAIL C1. TIGHTEN USING THE HEX KEY (5/32").

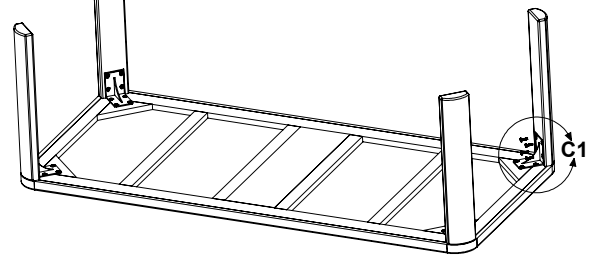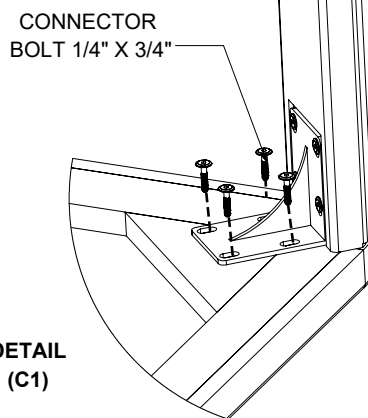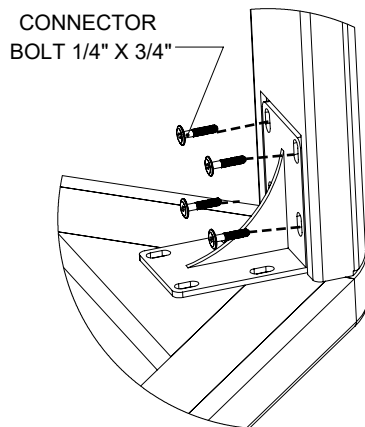

DESCRIPTION	#
DOWEL 10 X 40	4
CONNECTOR BOLT 1/4" X 3/4"	32
HEX KEY 5/32"	1