





FIG.1

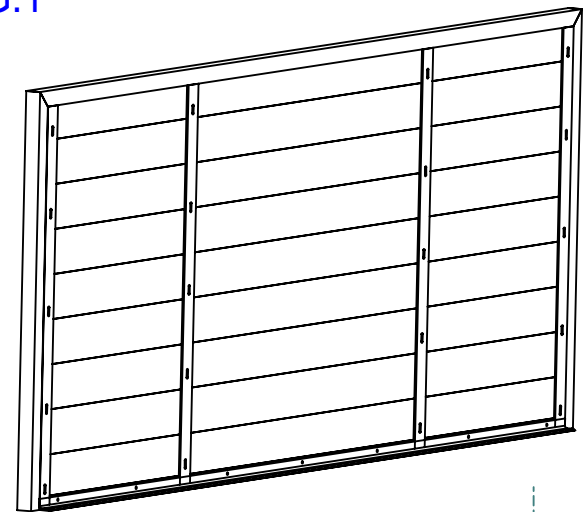

1. WITH SOMEONE HELP'S PLACE THE HEADBOARD IN TO THE FLAT AND CLEAN SURFACE
2. ALIGN THE LEGS WITH THE HEADBOARD AND INSERT THE METAL GUIDES INSIDE THE METAL POST AS SHOWN IN FIG. 1
3. WHEN THE PARTS ARE ALIGN, FROM THE BACK INSERT THE SCREWS AS SHOWN IN FIG. A

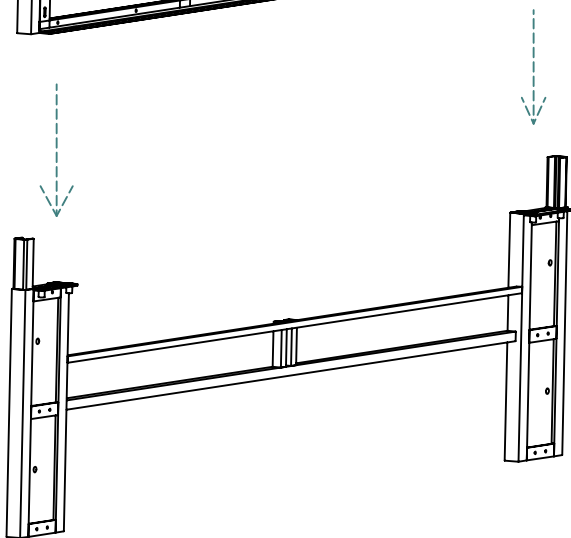

BUTTON SOCKET CAP 5/16 X 3/4

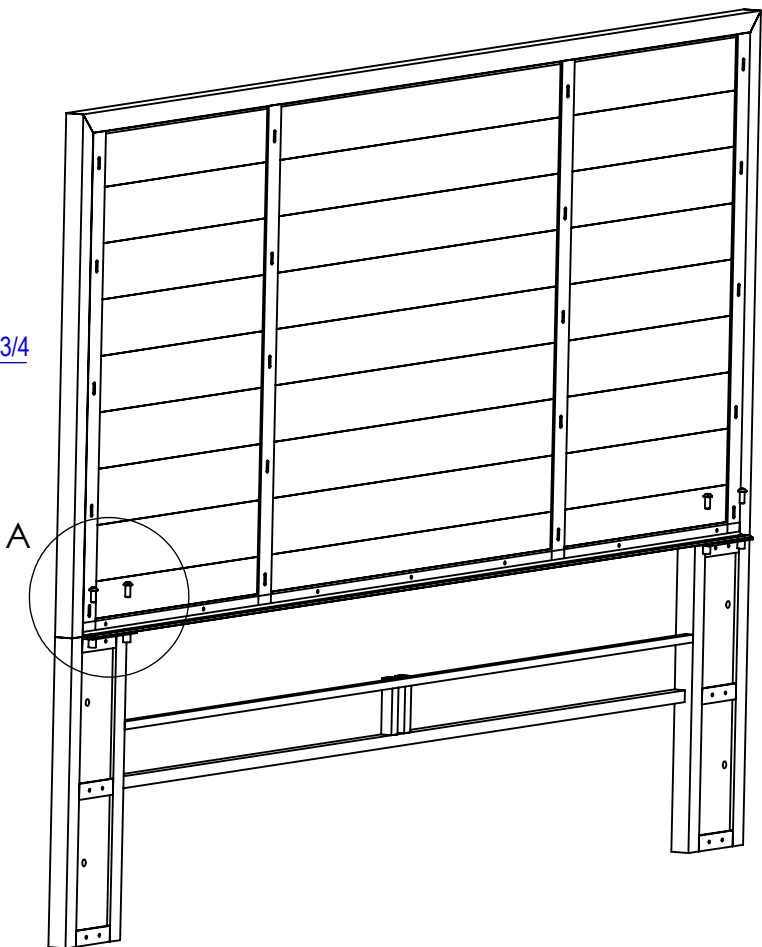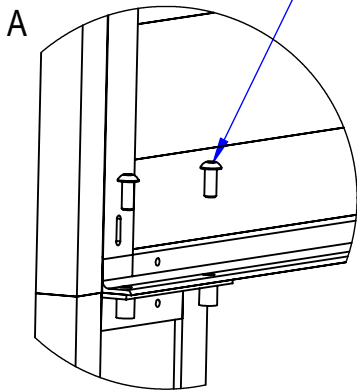

CODE	DESCRIPTION	#
1TOR003	BUTTON SOCKET CAP SCREW 5/16 x 3/4"	4
1HER251	ALLEN KEY 3/16	1

CODE	DESCRIPTION	#
1TOR003	TORNILLO ALLEN CABEZA BOLA 5/16 x 3/4	4
1HER251	LLAVE ALLEN 3/16	1



CODIGO:

I-HBD-E011