


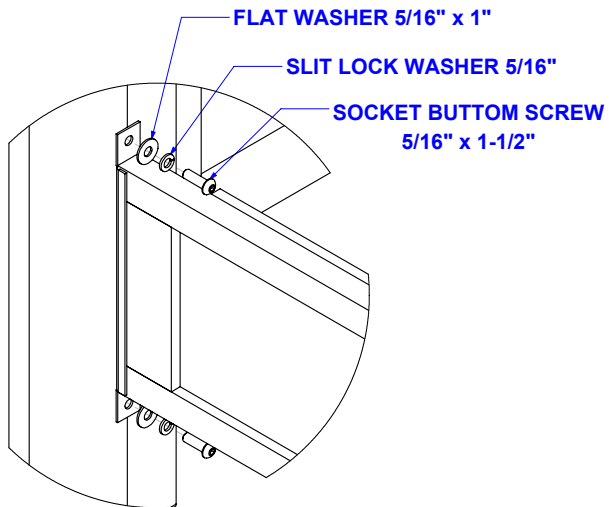

DETAIL C

STEP 1

1.- ALIGN THE RAILS TO THE PLATFORM, THE METAL SUPPORT MUST BE ALIGNED THE HOLES

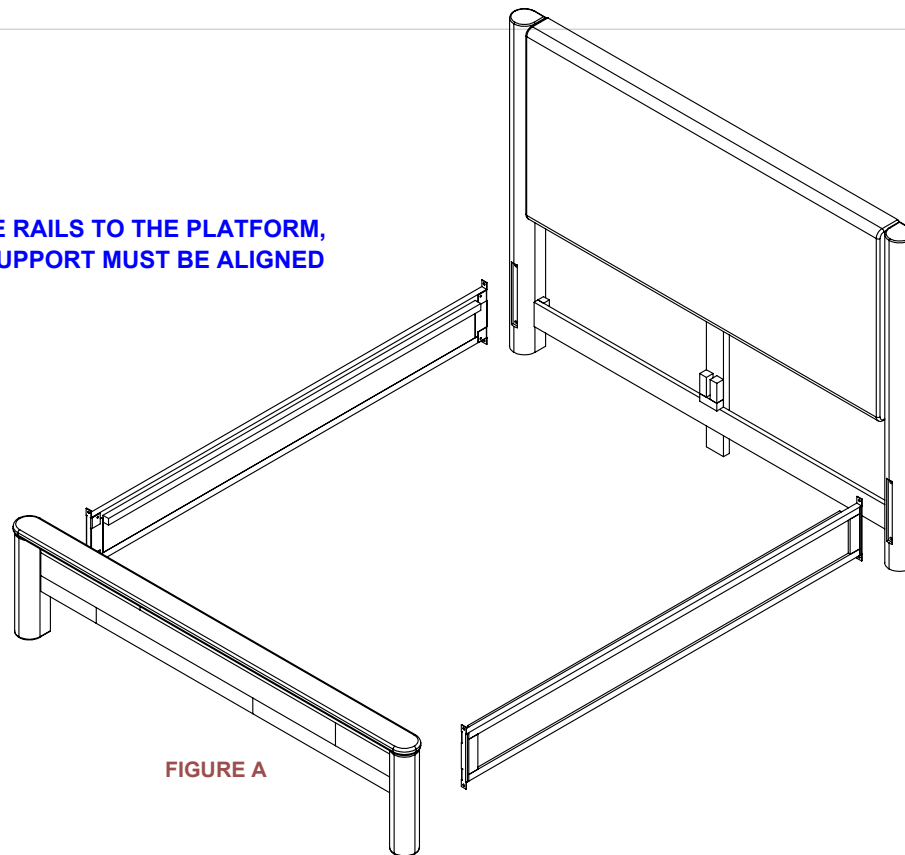


FIGURE A

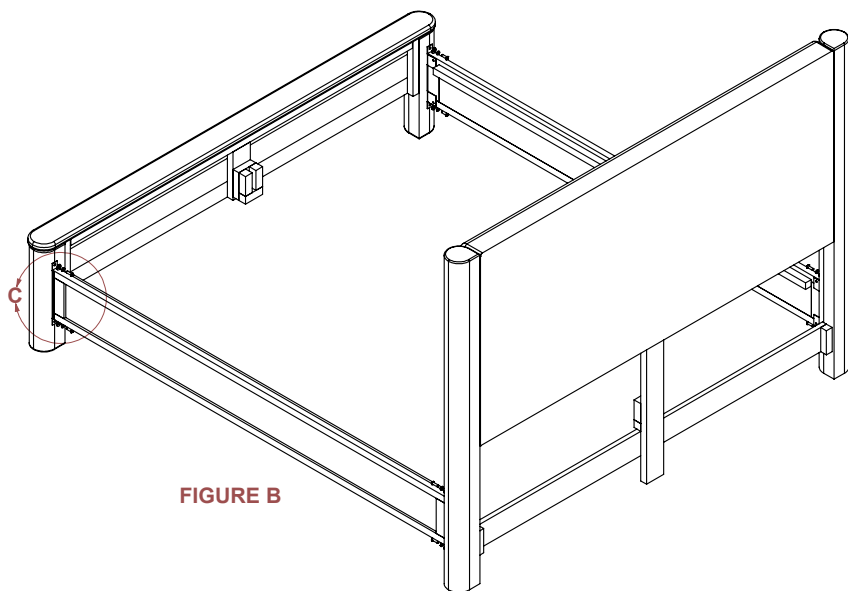


FIGURE B

STEP 2


2.- WHEN THE RAILS ARE ALIGNED INSERT THE SCREWS AS SHOWN IN DETAIL A AND B, FIRST THE PLATFORM SIDE AND THEN THE HEADBOARD SIDE



ASSEMBLING INSTRUCTIONS

I-IFD7382QUEEN

ITEM #	DESCRIPTION	#
1	BOTTOM SOCKET SCREW 5/16" x 1"	8
2	FLAT WASHER 5/16"	8
3	SLIT LOCK WASHER 5/16"	8
4	ALLEN KEY 1/4"	1

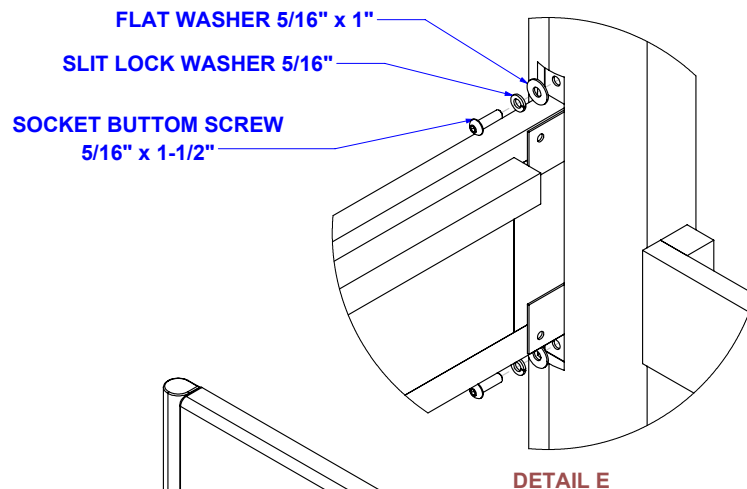

DETAIL E

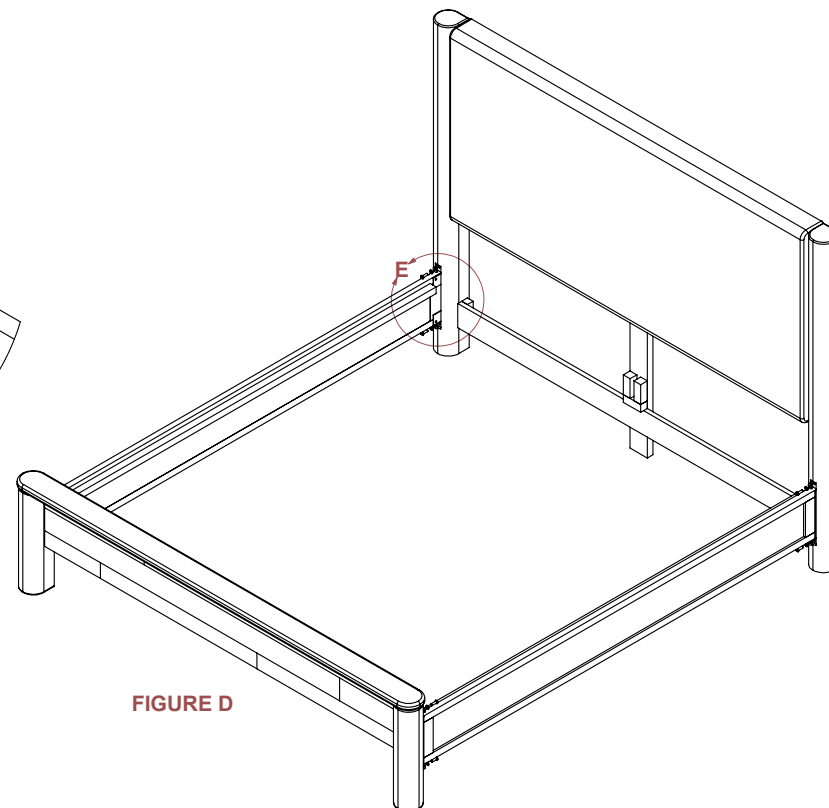


FIGURE D

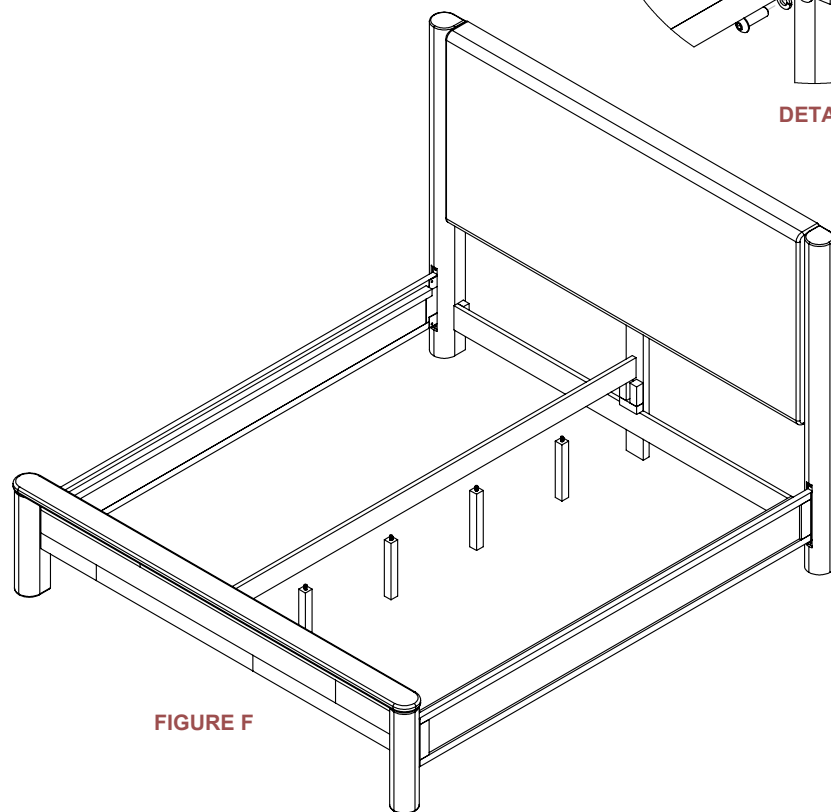


FIGURE F

STEP 3

3.- INSERT THE CENTRAL CROSSBAR AS SHOWN IN FIGURE F AND PLACE THE SUPPORT LEGS IN TO THE CROSSBAR



ASSEMBLING INSTRUCTIONS

I-IFD7382QUEEN

ITEM #	DESCRIPTION	#
1	BOTTOM SOCKET SCREW 5/16" x 1"	8
2	FLAT WASHER 5/16"	8
3	SLIT LOCK WASHER 5/16"	8
4	ALLEN KEY 1/4"	1

STEP 4

4.- WHEN THE SUPPORTS LEGS AND THE CROSSBAR ARE IN THE RIGHT PLACE IS TIME TO PLACE THE SLATS THEM OVER THE RAILS AS SHOW IN FIGURE G

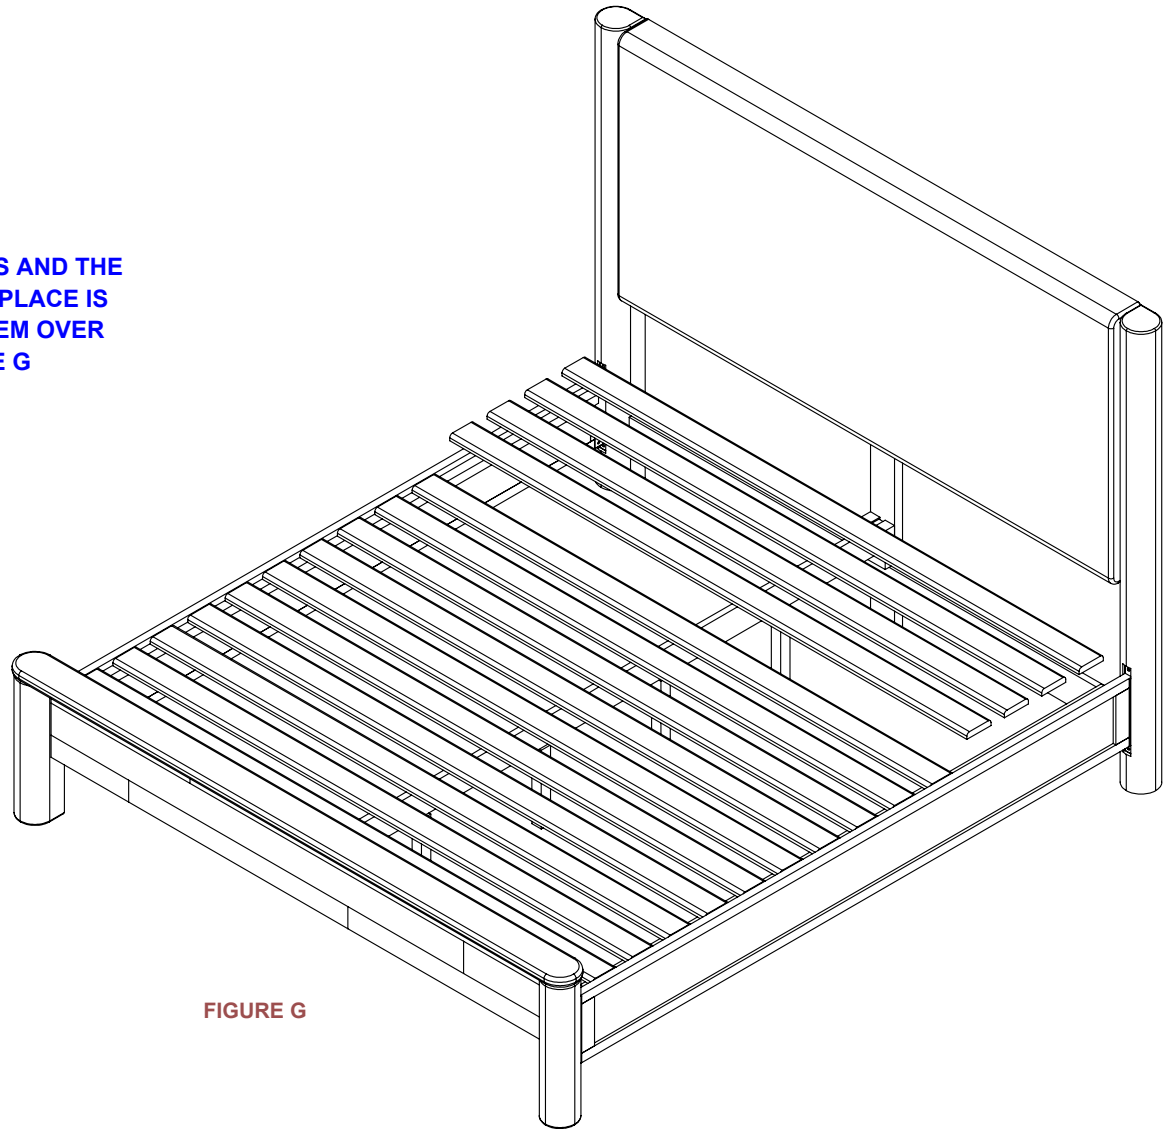


FIGURE G



ASSEMBLING INSTRUCTIONS

I-IFD7382QUEEN

ITEM #	DESCRIPTION	#
1TOR008	BOTTOM SOCKET SCREW 5/16" x 1"	8
1RON003	FLAT WASHER 5/16"	8
1RON011	SLIT LOCK WASHER 5/16"	8
1HER383	ALLEN KEY 1/4"	1